 




**MANUAL**

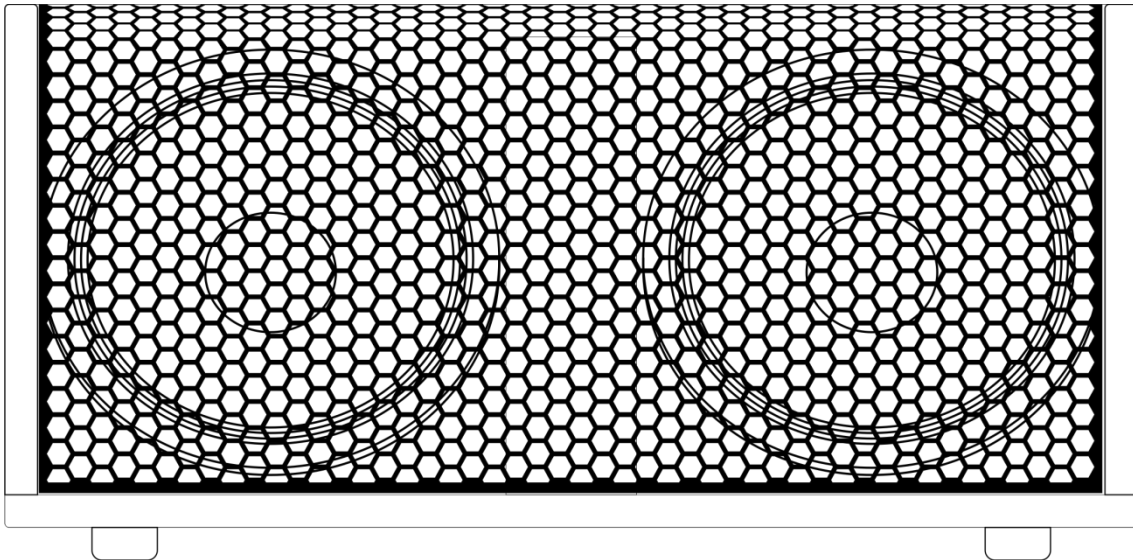

**ENGLISH**

# **XI-28B / Hanging Bracket**

**Ordercode: D3426 / D3426HB**

 
**Warning!**

- This item of equipment must be secured to the wall. Make sure that your walls are strong enough to bear the weight of the speaker. A speaker that is not correctly installed can topple over and cause injury or damage.
- The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorized modification to the device.
- The user is responsible for correct positioning and operating of the speaker. The manufacturer will not accept liability for damages caused by the misuse or incorrect installation of this device.
- Damages caused by non-observance are not subject to warranty.

**Important:**

There are many different types of wall materials, so screws for anchoring the speaker to the wall are not included. For advice on suitable screws and screw plugs, please contact your local specialist hardware store.


**Setup Example**

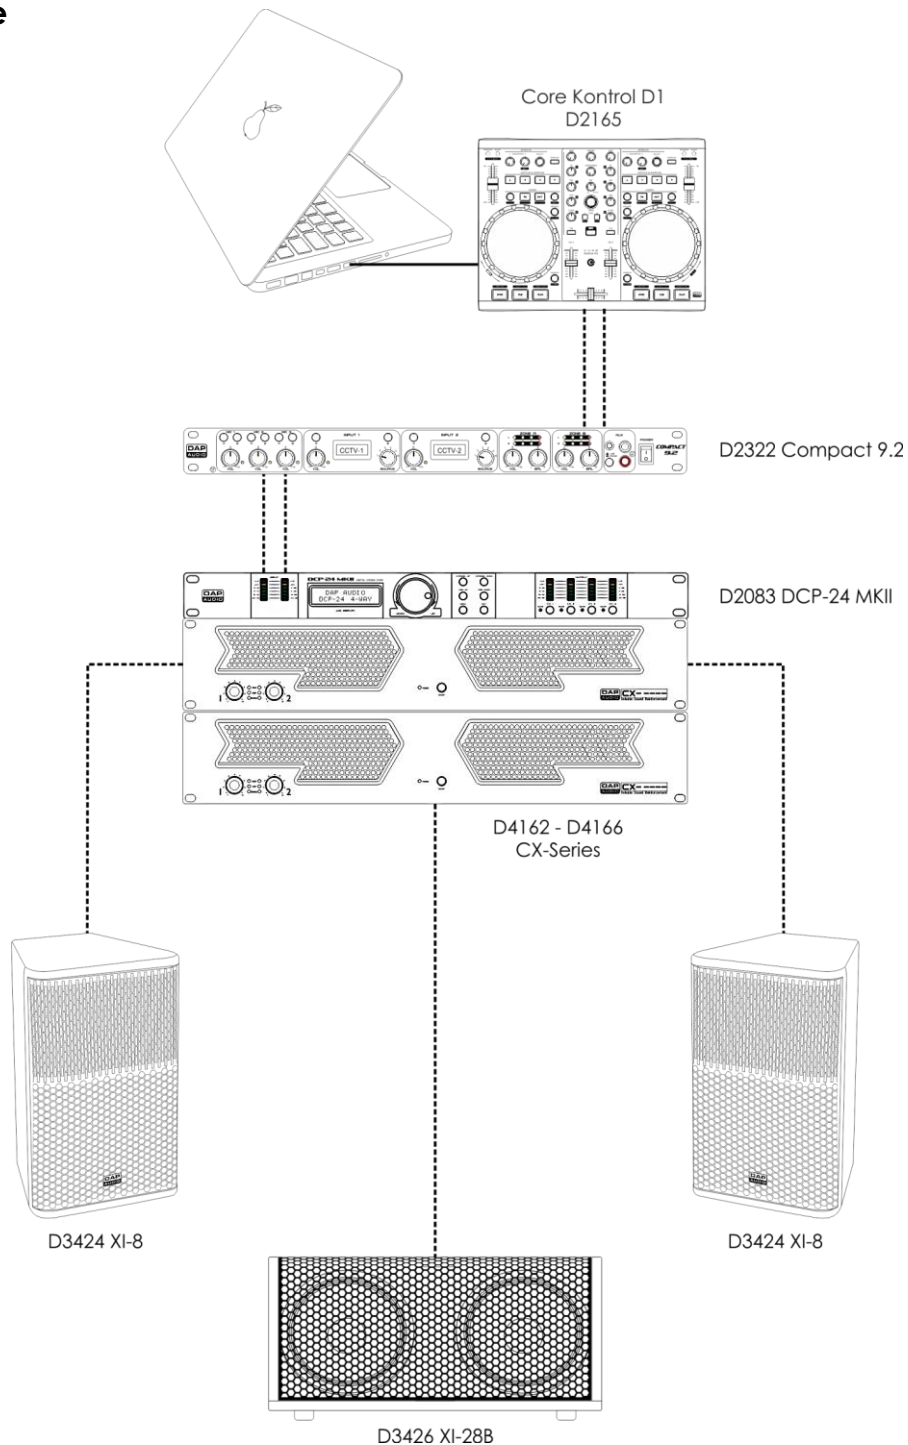


### Specifications XI-28B

Nominal Impedance	4 Ohm
Continuous power	400 Watt
Program power	800 Watt
Peak Power	1600 Watt
Freq. Response (processed)	45 – 110 Hz
Freq. Range (flat)	45 – 4000 Hz
Internal Crossover	None
Recommended High Pass Filter	45 Hz, BW-24
Recommended Low Pass Filter	110 Hz, LR-24
Sensitivity (Half Space)	100 dB/W /m
Peak SPL at 1 m (Theoretical)	132 dB
Nominal Dispersion (HxV)	360° x 180°
Dimensions(W x H x D)	520 x 240 x 540 mm
Net Weight	18 Kg
 
### Frequency Diagram

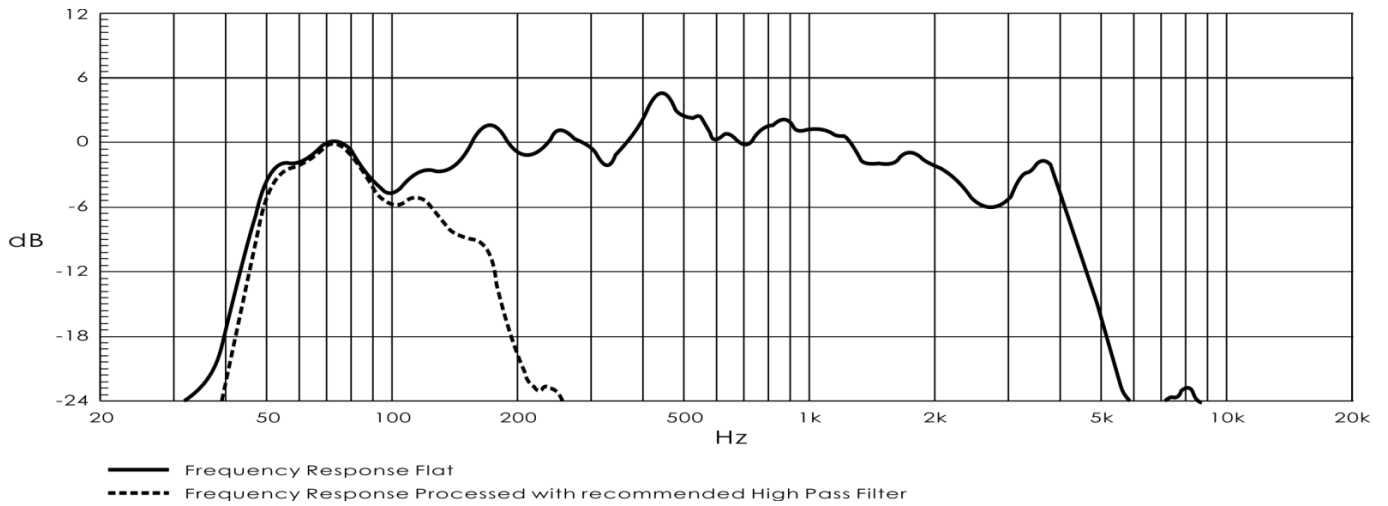

### Measurements Hanging Bracket

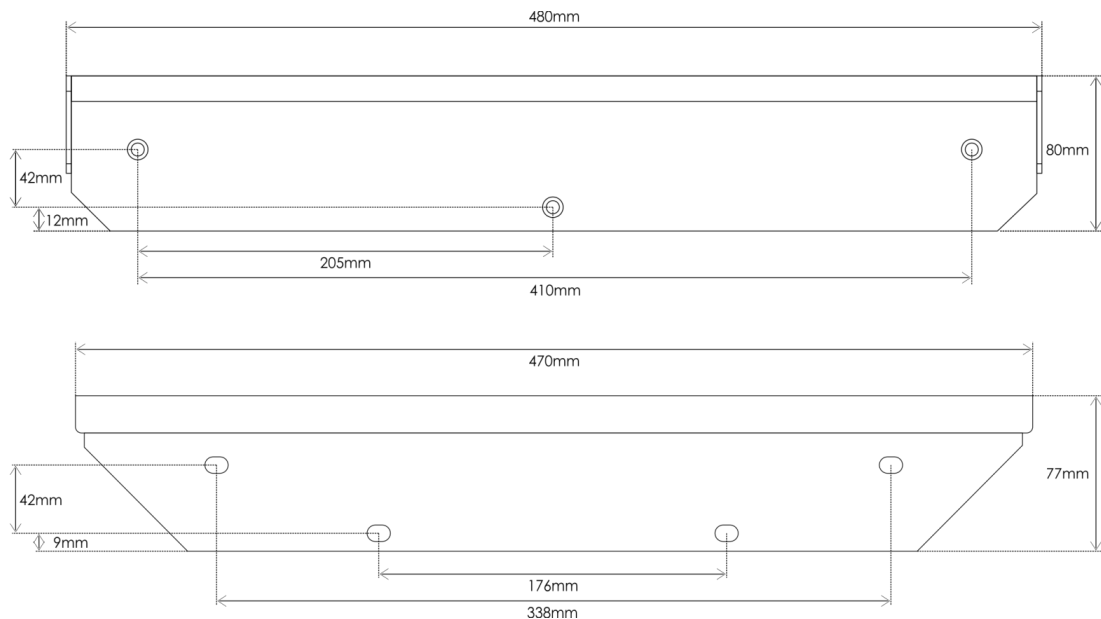 

### Bracket Assembly instructions

