

LOOP FUNCTIONS




1. Set loop and length for deck A. Use rotary part of encoder to set Autoloop length and switch part to start loop.
2. Move and activate loop for deck A. Use rotary part of the encoder to move the loop along the track and switch part to activate or deactivate the loop.
3. Set loop and length for deck B. Use rotary part of encoder to set Autoloop length and switch part to start loop.
4. Move and activate loop for deck B. Use rotary part of the encoder to move the loop along the track and switch part to activate or deactivate the loop.

FX ROTARY PARAMETER CONTROLS



1. Dry / Wet control for FX Unit 1
2. Parameter 1 control for FX Unit 1
3. Parameter 2 control for FX Unit 1
4. Parameter 3 control for FX Unit 1
5. FX type select for FX Unit 1
6. Deck A pan
7. Deck B pan

VOLUME AND FILTERS

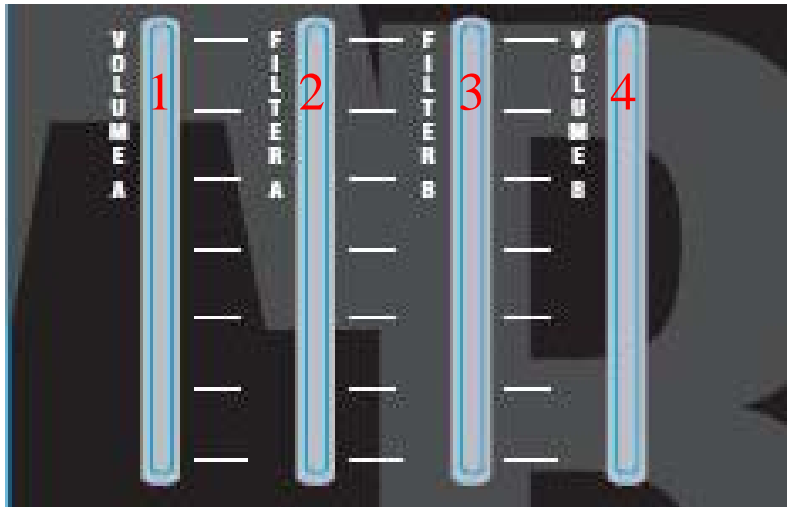

1. Deck A Volume Control
2. Deck A Filter Frequency
3. Deck B Filter Frequency
4. Deck B Volume Control

SHIFT, SCRATCH AND ALT BUTTONS



1. Hold to select BLUE (Shift) layer functions for Deck A
2. Hold to select SCRATCH Mode for Deck A
3. Hold to select BLUE (Shift) layer functions for Deck B
4. Hold to select SCRATCH Mode for Deck B
5. Hold to select RED (ALT) layer functions for Deck A
6. Hold to select RED (ALT) layer functions for Deck B

BUTTONS - WHITE (DEFAULT) LAYER



1. Assign FX Unit 1 to Deck A
2. Assign FX Unit 2 to Deck A
3. Assign FX Unit 1 to Deck B
4. Assign FX Unit 2 to Deck B
5. FX Unit 1 On
6. FX Unit 1 Parameters Reset
7. FX Unit 1 Button 1
8. FX Unit 1 button 2

BUTTONS - BLUE (SHIFT) LAYER



1. Pitch Bend Down for shifted deck
2. Filter On Deck A
3. Filter On Deck B
4. Pitch Bend Up for shifted deck
5. Select Previous Cue Point on shifted deck
6. Select Next Cue Point on shifted deck
7. Set Cue Point on shifted deck
8. Delete Cue Point on shifted deck

BUTTONS - RED (ALT) LAYER



1. Jump to HotCue 1 on ALT deck
2. Jump to HotCue 2 on ALT deck
3. Jump to HotCue 3 on ALT deck
4. Jump to HotCue 4 on ALT deck

PITCH ENCODER




Switch

White (DEFAULT) Layer – Master BPM Tap Tempo
Blue (SHIFT) Layer – Sync shifted deck to Master
Red (ALT) Layer – Set/Reset Keylock on ALT deck

Rotary


White (DEFAULT) Layer – Master BPM Tempo Adjust
Blue (SHIFT) Layer – Key adjust on shifted deck
Red (ALT) Layer – Tempo adjust on ALTdeck

JOGWHEEL SWITCHES

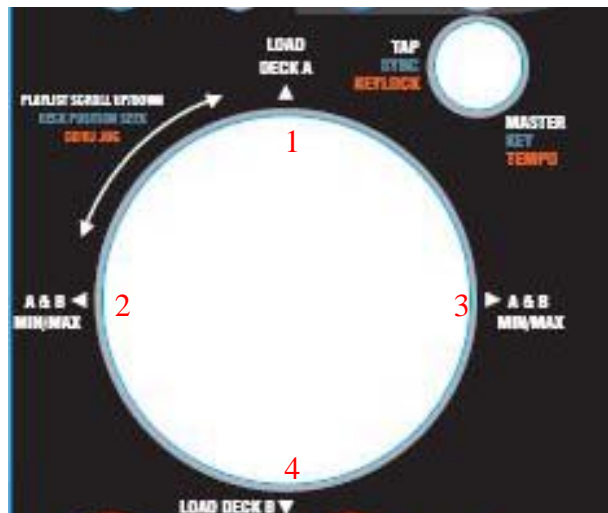

1. Load selected track into Deck A
2. Maximise / Minimise decks A and B
3. Maximise / Minimise decks A and B
4. Load selected track into Deck B

JOGWHEEL ROTATION

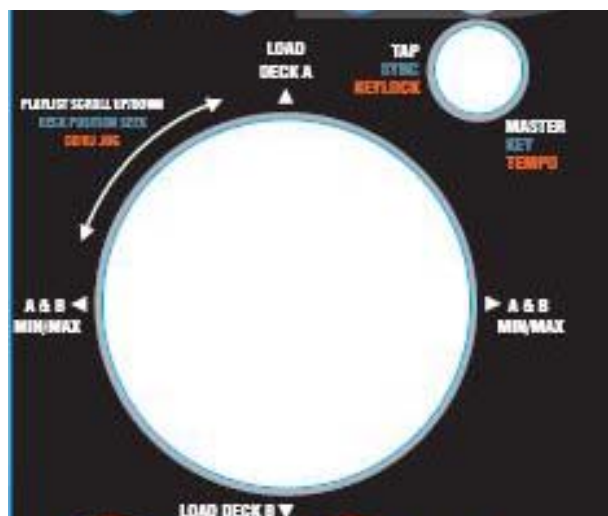

White (DEFAULT) Layer – Playlist Scroll Up/Down
Blue (SHIFT) Layer – Seek through shifted deck
Red (ALT) Layer – CD/Jog mode for ALT deck