

# Configuring Traktor Pro/Duo 2 for the DJ Console Mk2 (Windows version)

## ***1- Configuration of the ASIO driver***


- a) From the DJ Console control panel, set the audio mode to **ASIO**
- b) Click the **Main** tab and configure the various driver settings to be used by Traktor.

**NOTE:** These settings cannot be modified once Traktor has been launched.




## 2- Audio configuration in Traktor

- a) From the **FILE** menu, select **Audio Setup**, then choose **Hercules DJ Console MK2 ASIO** as **Audio Device**.

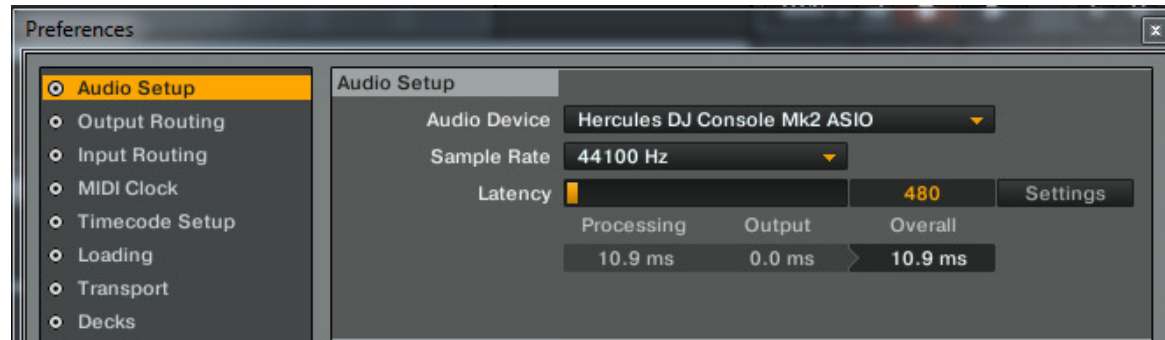

Notice that the SAMPLE RATE and AUDIO LATENCY should reflect the configuration previously made in the Control panel

- b) Under **Output Routing**, set Output 3 & 4 for **Monitor** and Output 1 & 2 for **Master**

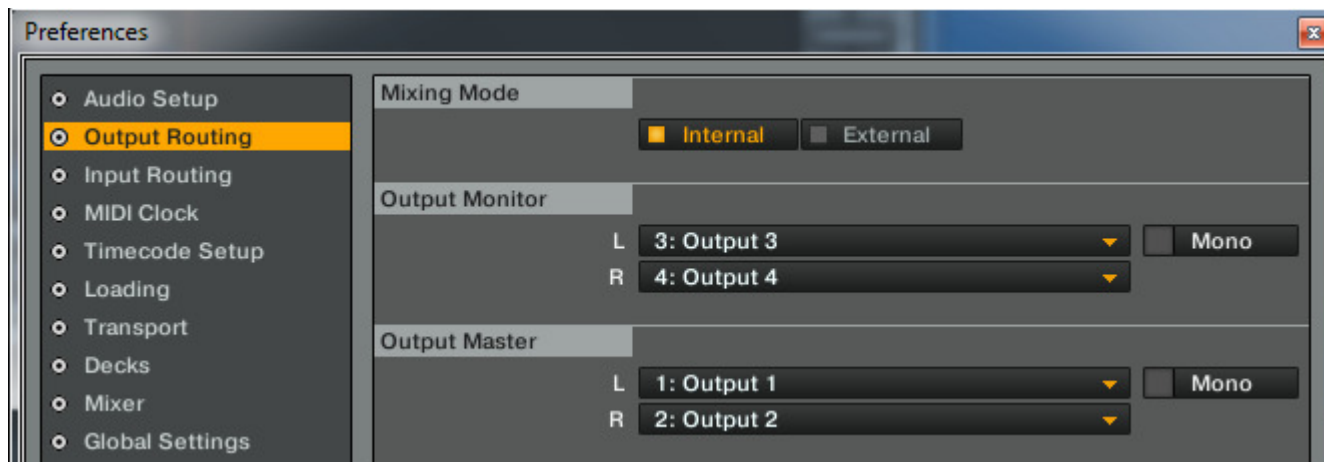

### 3- Configuration of the Midi controllers in Traktor Pro/Duo 2 (Version 2.01)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.




b. **Controller Mapping, MIDI Device Setup** and **Effects Settings** should be selected before clicking OK

c. In **Controller-Manager**:

-For Device, select **Generic MIDI-DJ Console Mk2**

- Do the same for both **In-Port** and **Out-Port**.

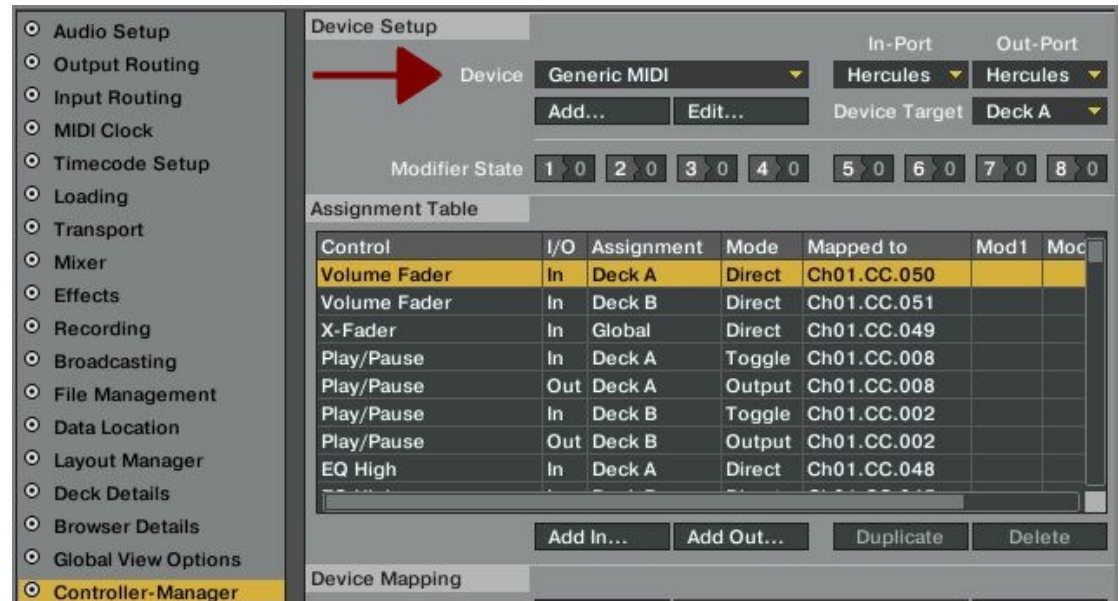

This menu also give you access to the various MIDI settings, should you wish to modify them.




## **MIDI Layout for the DJ Console Mk2 and Traktor Pro/Duo 2**

**NOTE:** The terms used are those employed in Traktor

### Main Configuration:

- A-** FX/Cue/Loop buttons/ **Secondary Function (See below)**
- B-** Deck Tempo
- C-** EQ (Bass/ Mid/ Treble)
- D-** Toggle FX/Cue/Loop mode
- E-** Browser List Select Up/Down
- F-** Deck Time Stretch ON
- G-** Deck Volume
- H-** Deck Pitch Bend
- I-** Deck Load Selected
- J-** Deck Tempo - Sync
- K-** Seek Position/ Scratch
- L-** Deck load Previous / Next
- M-** Deck Cue/Pause
- N-** Deck Play/Pause
- O-** X-Fader
- P-** Headphone:

- Deck Monitor Cue (Deck A)
- Deck Monitor Cue (Deck B)
- Mix
- Split

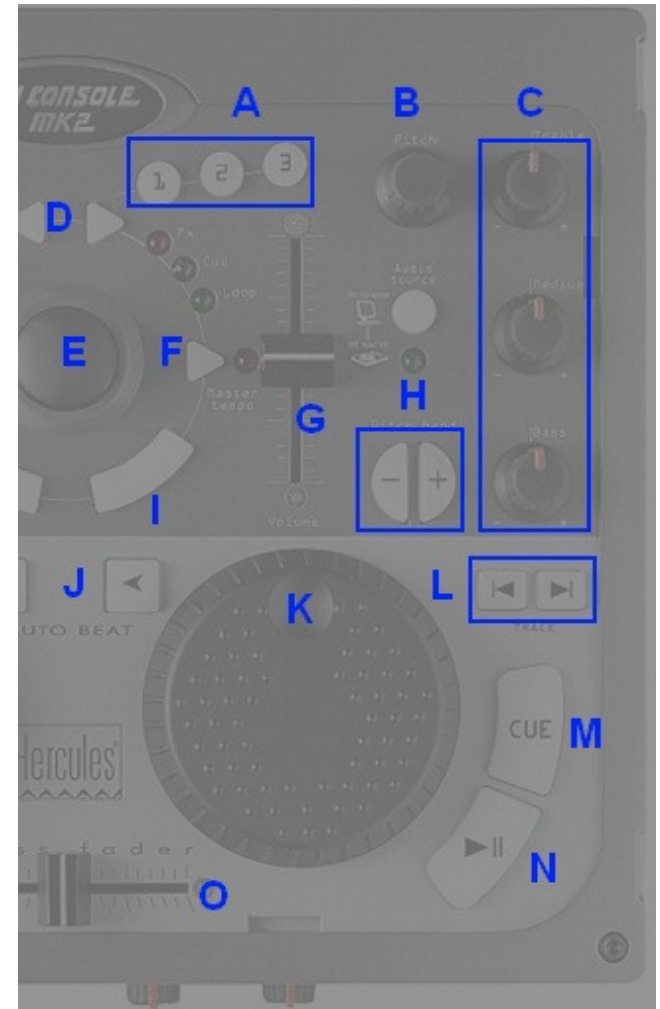

Hercules® Technica

## Secondary functions:



- Press and hold the button **2** to control the deck's gain using the Pitch Knobs (A & B)



- Press and hold the button **3** to enable the Scratch function on the jog wheel.





### **FX mode:**

- 1-** Effect 1 On
- 2-** Effect 2 On
- 3-** Effect 3 On



### **Cue mode:**

- 1-** Select/ Set+Store Hotcue 1
- 2-** Select/ Set+Store Hotcue 2
- 3-** Select/ Set+Store Hotcue 3



### **Loop mode:**

- 1-** Loop Size 1/2
- 2-** Loop Size 2
- 3-** Loop Size 4



## Midi controllers map

