

## Configuring Traktor 2 Pro/Duo for the DJ Console Mk4 (OS X version)

### *1- Configuration of the MIDI channel*

From the DJ Console control panel, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1**.



This is very important as the TSI profile provided is configured for the DJ Console Mk4 to work on this channel.


If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the TSI profile accordingly. Consult Traktor's user manual for more details.




## 2- Audio configuration in Traktor

a) From the main menu, click on **PREFERENCES**, and select **AUDIO SETUP**.


Choose **Hercules DJ Console Mk4** as **Audio Device**. You can also adjust the AUDIO LATENCY.

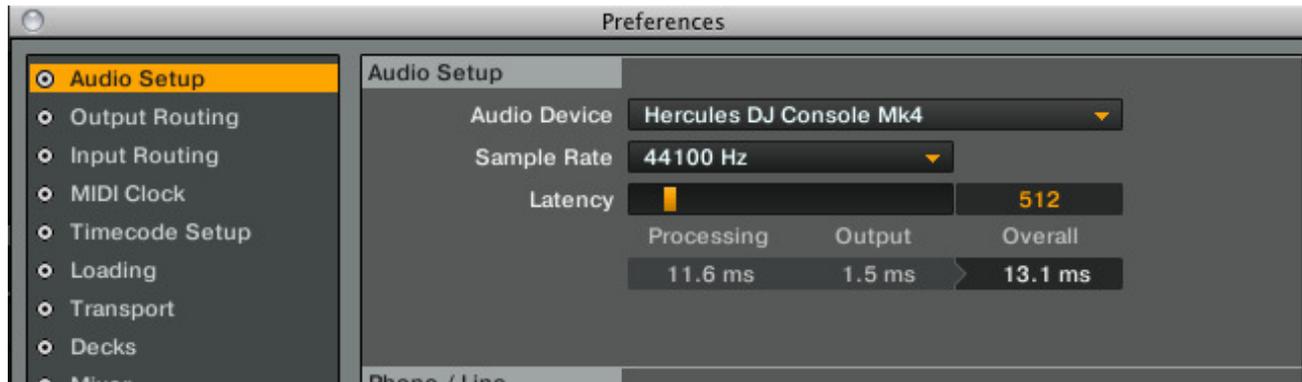

b) Under **Output Routing**, set **Output 3 & 4** for **Monitor** and **Output 1 & 2** for **Master**.

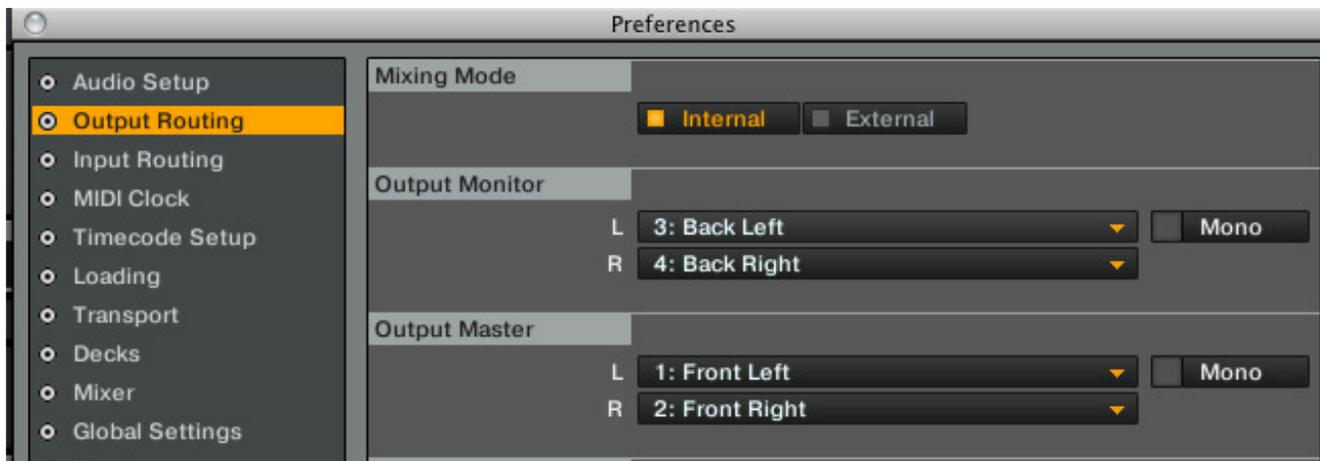

c) If you are using external sources, for **Input Routing**, select the DJ Console inputs for channels A&B.

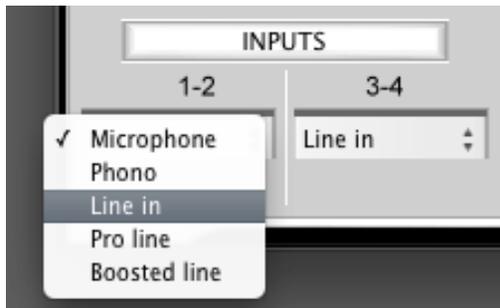


Don't forget to select the appropriate source Input type in the **DJ Console control panel**.

Using the **Source** buttons on **Deck A&B** will allow Traktor to switch between Internal and External playback



### 3- Configuration of the Midi controllers in Traktor 2 Pro/Duo (Version 2.12)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.

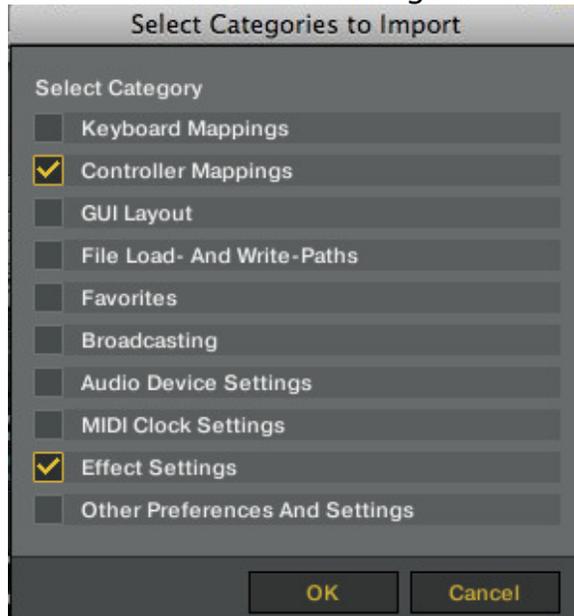


b. **Controller Mapping** and **Effects Settings** should be selected before clicking OK

c. In **Controller-Manager**:

-For Device, select **DJ Console Mk4- Generic MIDI**

- Do the same for both **In-Port** and **Out-Port**.

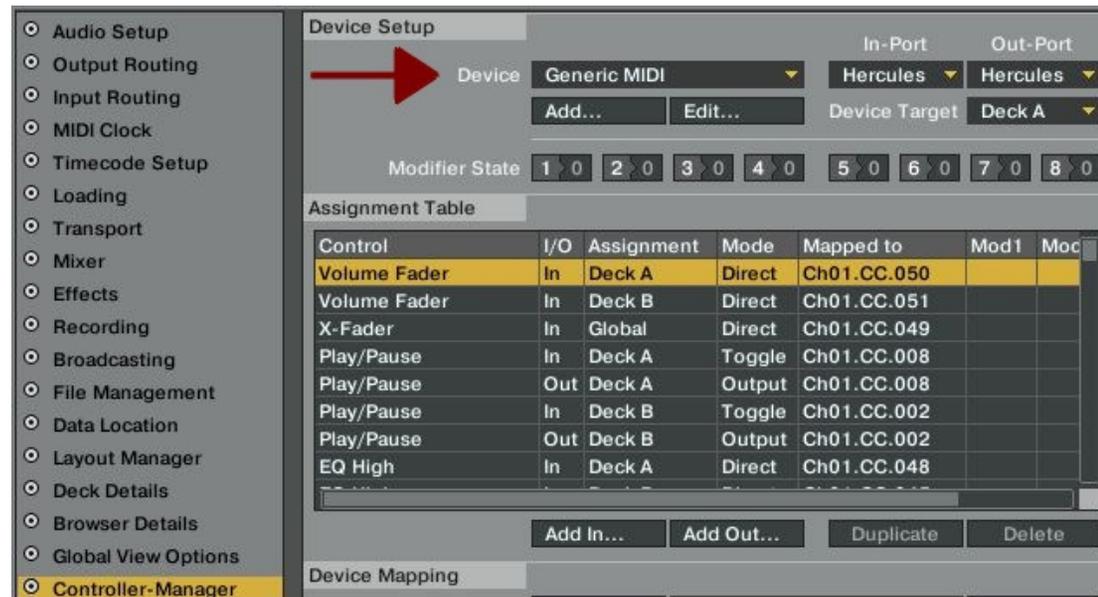

This menu also give you access to the various MIDI settings, should you wish to modify them.




## **MIDI Layout for the DJ Console Mk4 and Traktor 2 Pro/Duo**

**NOTE:** The terms used are those employed in Traktor

### Main Configuration:

- A-** Deck Input Select
- B-** Tempo
- C-** Tempo Bend (Down/Up)
- D-** Sync
- E-** Seek position (Backward/Forward)
- F-** EQ (Bass/ Mid/ Treble)
- G-** Scratch On/Off
- H-** Monitor Cue
- I-** Load Selected
- J-** Jog Turn
- K-** Volume Fader
- L-** Cue
- M-** Play/Pause
- N-** X-Fader
- O-** Monitor Mix

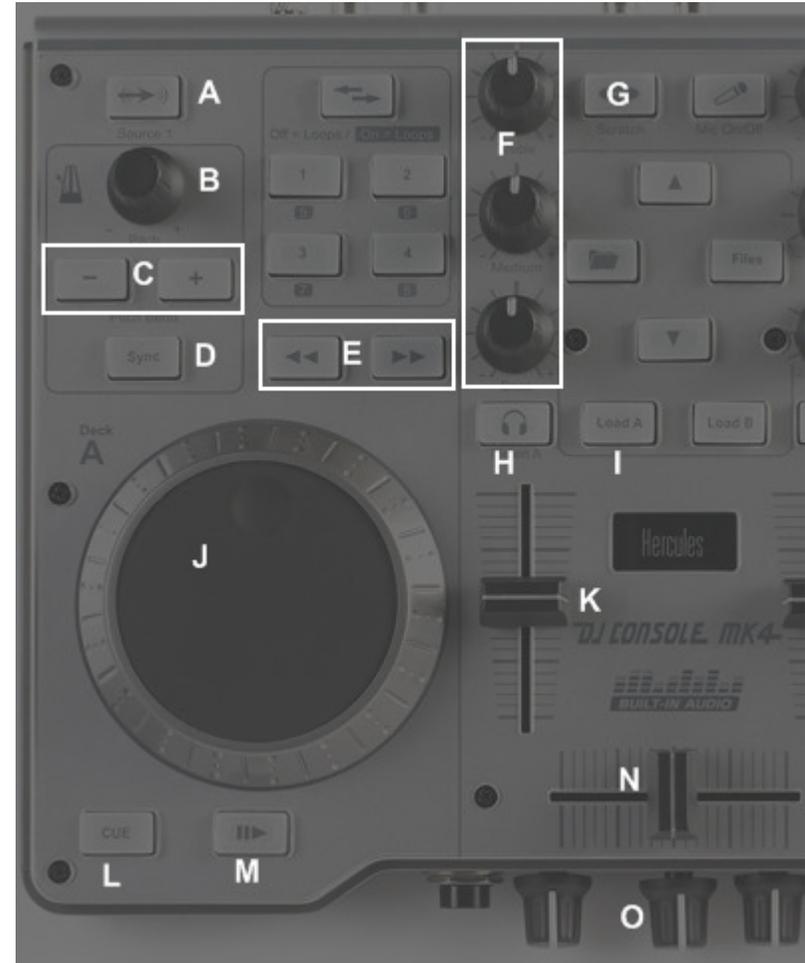


Scratch:



**CUE + Jog Wheel : Jog Turn (Scratch)**



## Navigation/ browser:

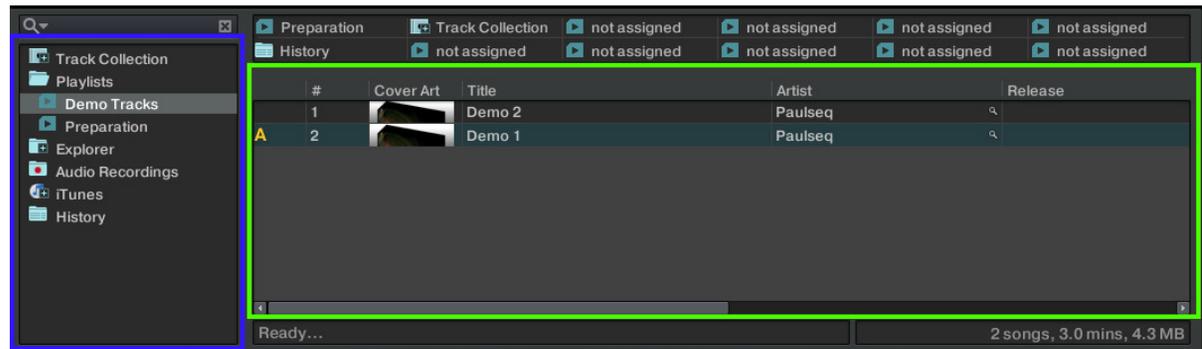

## Folder navigation

**Folder** + ↑ ↓ : Step browsing


**Folder (A)** + Left Jog Wheel:  
Fast browsing

**Folder (A)** + LOAD A:  
Expand/Collapse

## Playlist navigation (Default)

↑ ↓ : Step browsing

**File (B)** + Right Jog Wheel:  
Fast browsing

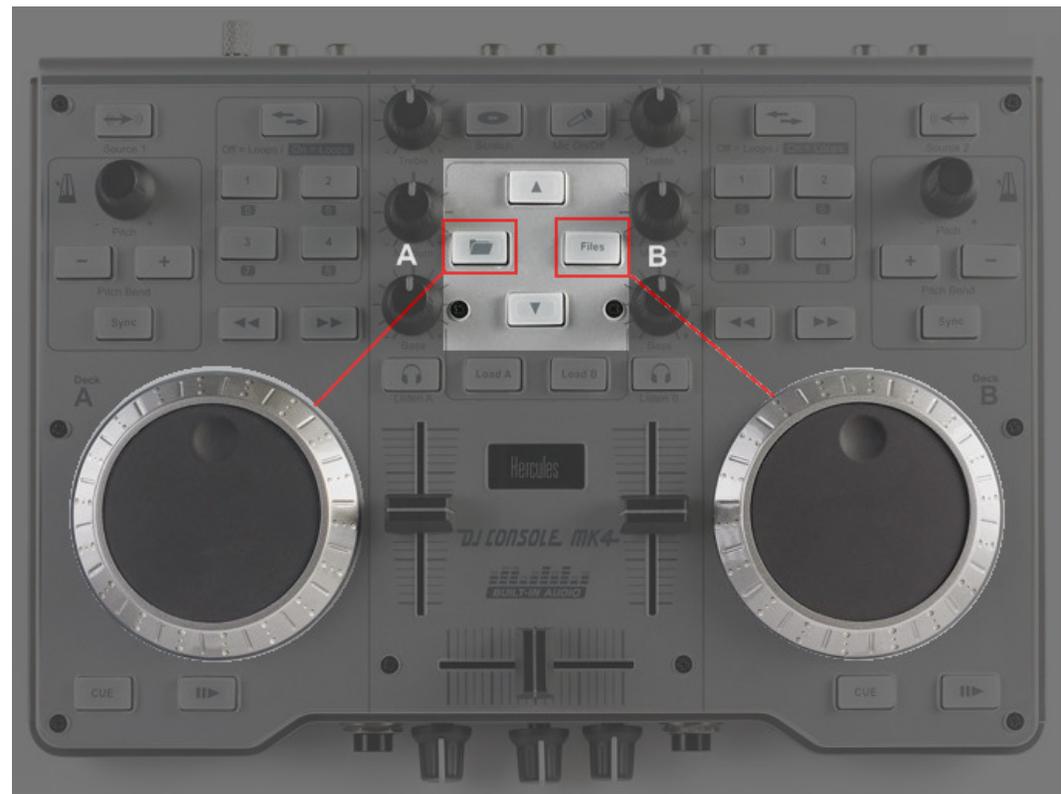

## Loops / FX (Group):

- 1- Loop Set (In/Out)
- 2- Filter (Press and hold) + deck's **PITCH** knob
- 3-: Loop Size (-)
- 4-: Loop Size (+)



5- Effect 1 On


6- Effect 2 On

7- Effect 3 On


8- Effect unit 1 On (Deck A) / Effect unit 2 On (Deck B)



## MIDI controllers map

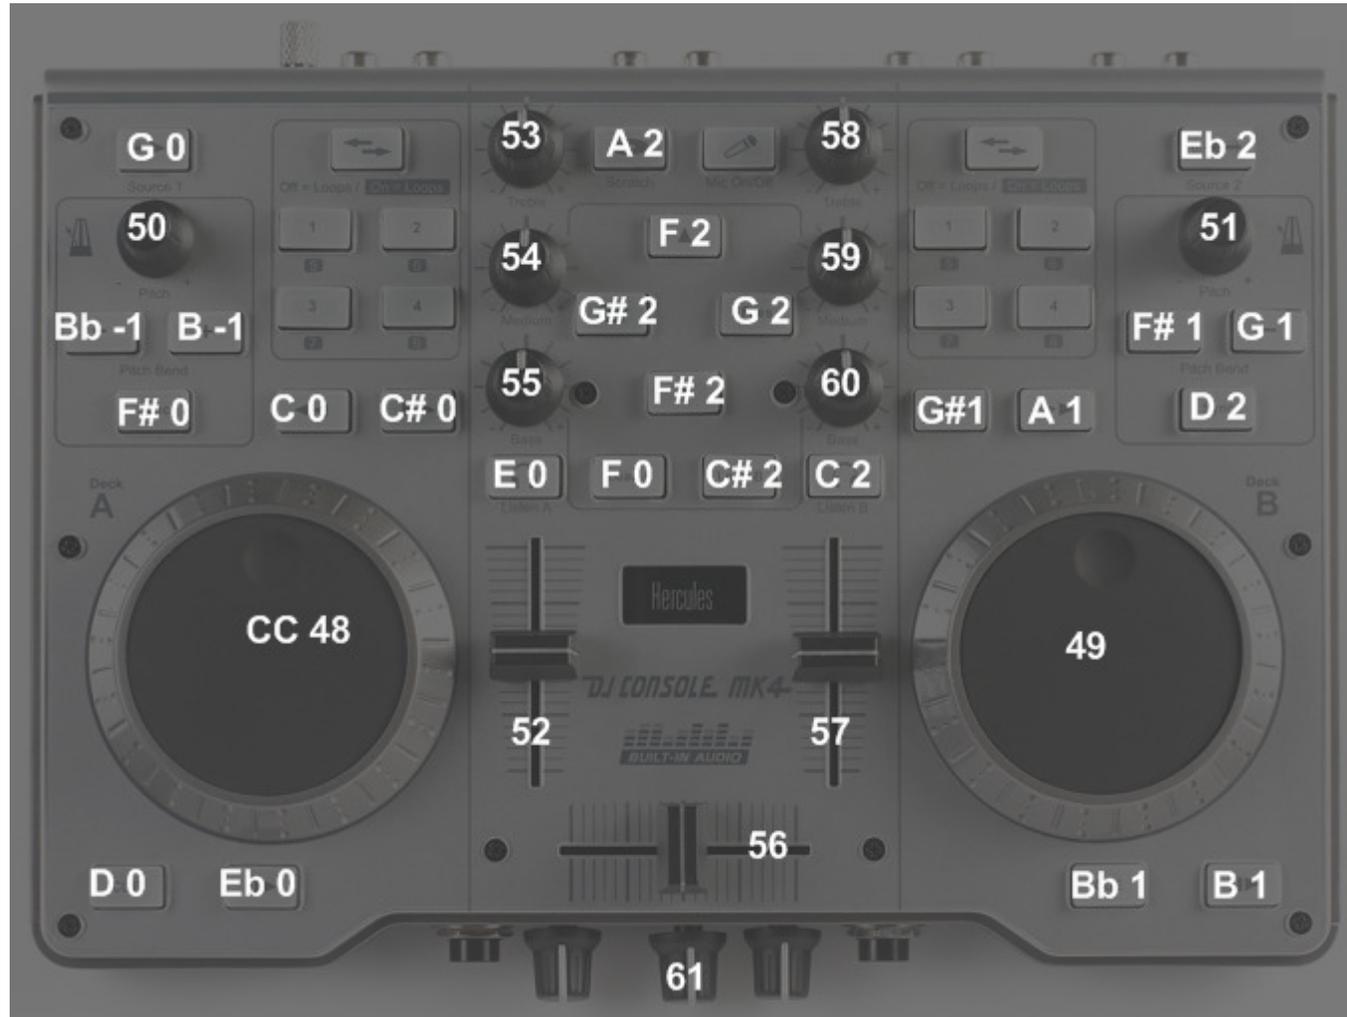

Deck A

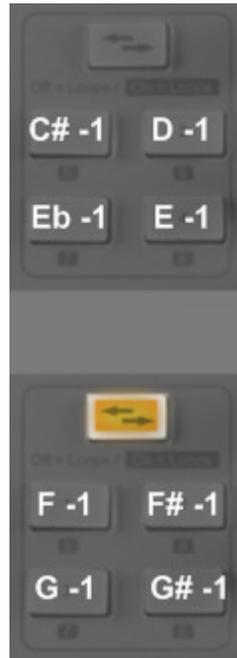

Deck B

