


Configuring Traktor 2 Pro/Duo for the DJ Console Mk4 (Windows version)


1- Configuration of the ASIO driver/ MIDI channel

- a) From the DJ Console control panel, set the audio mode to **ASIO**
- b) Click the **ASIO** tab and configure the various driver settings to be used by Traktor.

NOTE: These settings cannot be modified once Traktor has been launched.

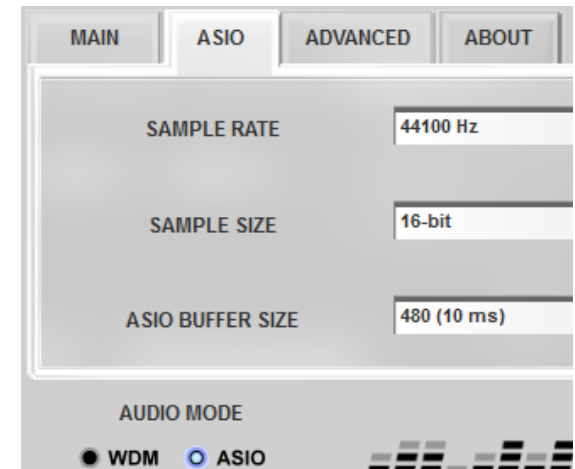

- c) Next, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1**.

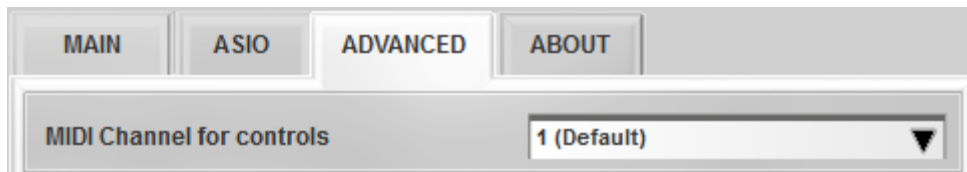

This is very important as the profile provided is configured for the DJ Console Mk4 to work on this channel.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly. Consult Traktor's user manual for more details.




2- Audio configuration in Traktor

- a) From the **FILE** menu, select **Audio Setup**. Choose **Hercules DJ Console Mk4 ASIO** as **Audio Device**.


Notice that the SAMPLE RATE and AUDIO LATENCY should reflect the configuration previously made in the Control panel.



- b) Under **Output Routing**, set **Output 3 & 4** for **Monitor** and **Output 1 & 2** for **Master**

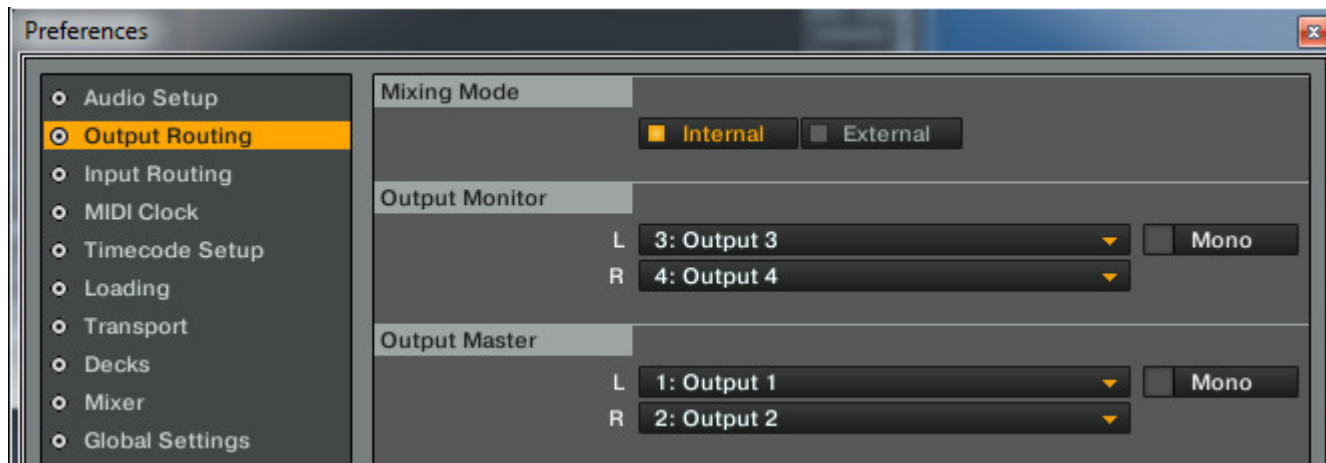

- c) If you are using external sources, for **Input Routing**, select the DJ Console inputs for channels A&B.

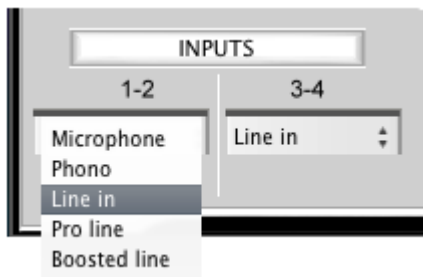

Don't forget to select the appropriate source Input type in the **DJ Console control panel**.

Using the **Source** buttons on **Deck A&B** will allow Traktor to switch between Internal and External playback

3- Configuration of the Midi controllers in Traktor 2 Pro/Duo (Version 2.12)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.




b. **Controller Mapping** and **Effects Settings** should be selected before clicking OK

c. In **Controller-Manager**:

-For Device, select **DJ Console Mk4- Generic MIDI**

- Do the same for both **In-Port** and **Out-Port**.

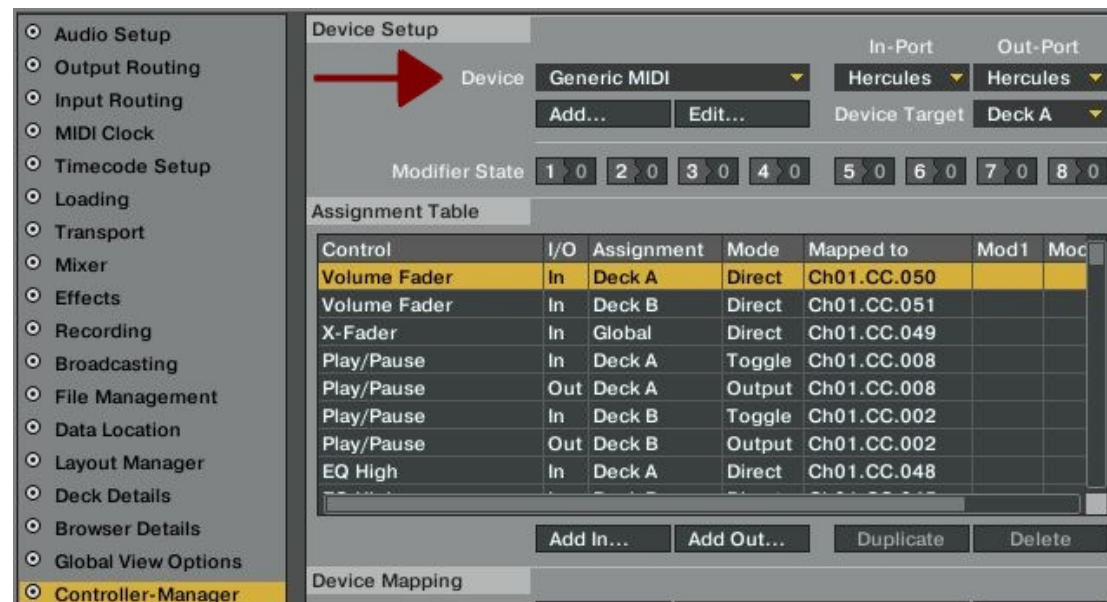

This menu also give you access to the various MIDI settings, should you wish to modify them.




MIDI Layout for the DJ Console Mk4 and Traktor 2 Pro/Duo

NOTE: The terms used are those employed in Traktor

Main Configuration:

- A-** Deck Input Select
- B-** Tempo
- C-** Tempo Bend (Down/Up)
- D-** Sync
- E-** Seek position (Backward/Forward)
- F-** EQ (Bass/ Mid/ Treble)
- G-** Scratch On/Off
- H-** Monitor Cue
- I-** Load Selected
- J-** Jog Turn
- K-** Volume Fader
- L-** Cue
- M-** Play/Pause
- N-** X-Fader
- O-** Monitor Mix

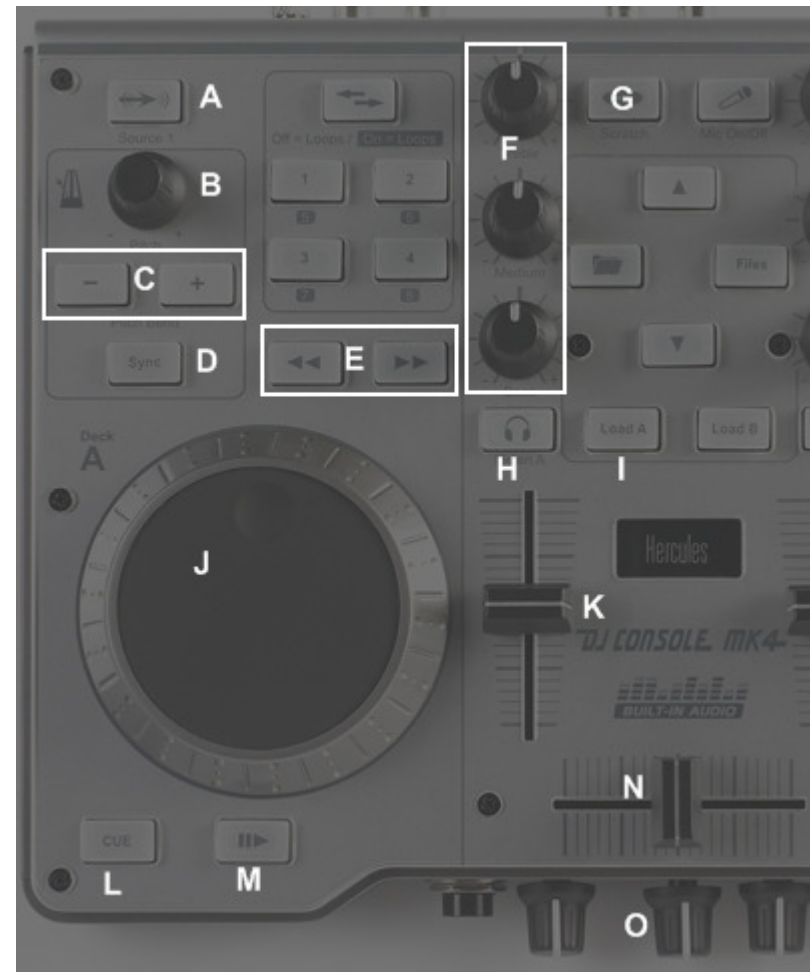


Scratch:



CUE + Jog Wheel : Jog Turn (Scratch)



Navigation/ browser:

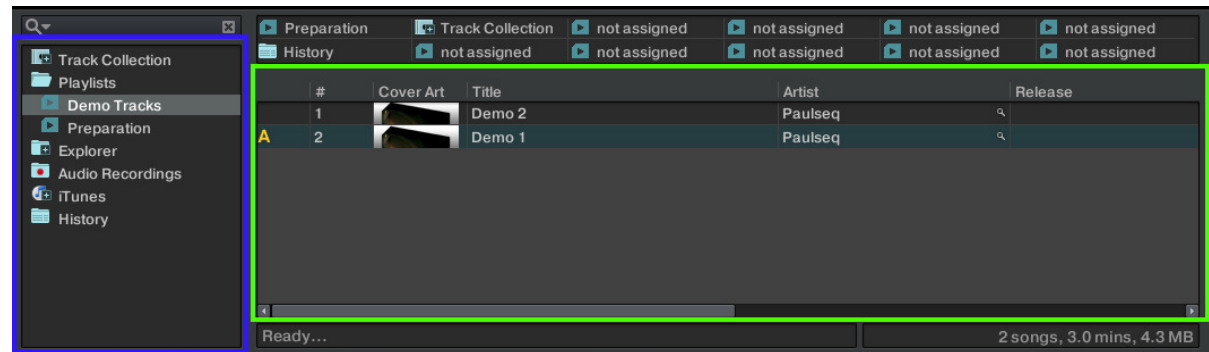

Folder navigation

Folder + ↑ ↓ : Step browsing


Folder (A) + Left Jog Wheel:
Fast browsing

Folder (A) + LOAD A:
Expand/Collapse

Playlist navigation (Default)


↑ ↓ : Step browsing

File (B) + Right Jog Wheel:
Fast browsing

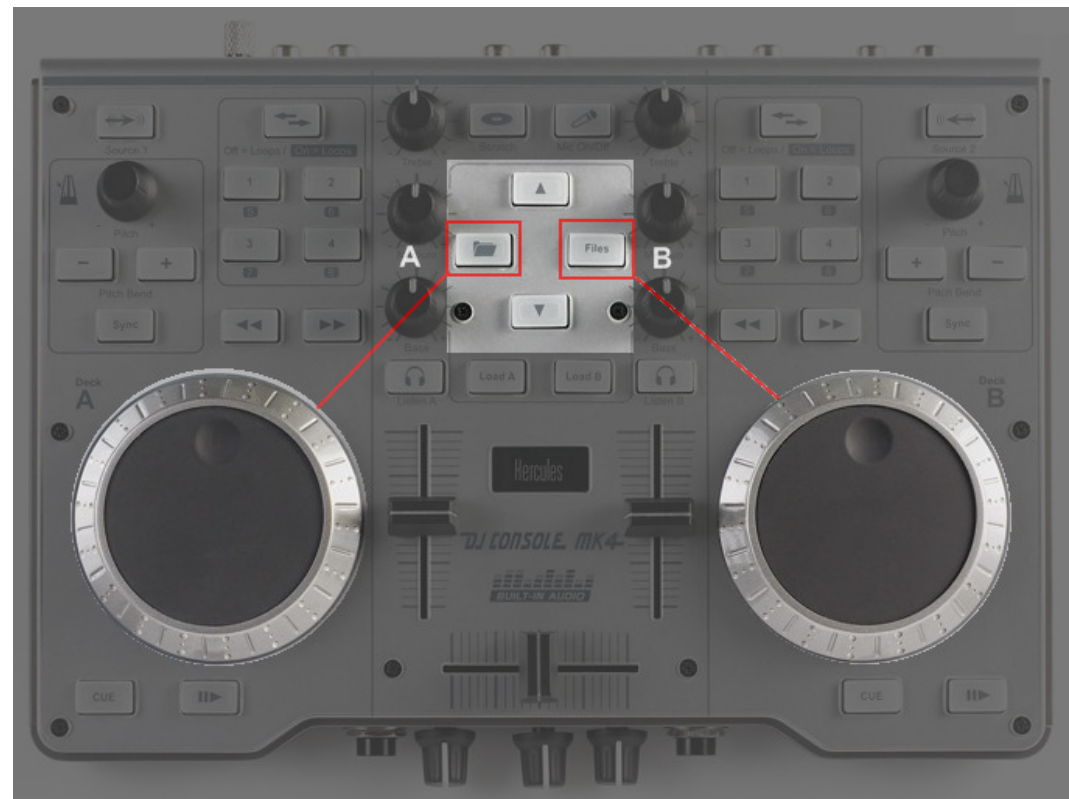

Loops / FX (Group):

- 1- Loop Set (In/Out)
- 2- Filter (Press and hold) + deck's **PITCH** knob
- 3-: Loop Size (-)
- 4-: Loop Size (+)

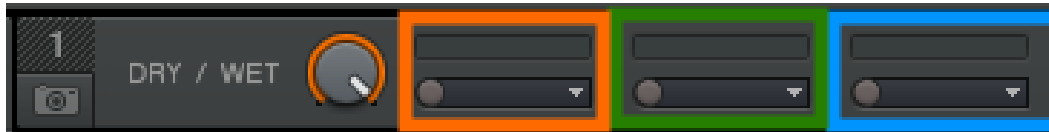

5- Effect 1 On


6- Effect 2 On

7- Effect 3 On


8- Effect unit 1 On (Deck A) / Effect unit 2 On (Deck B)



MIDI controllers map

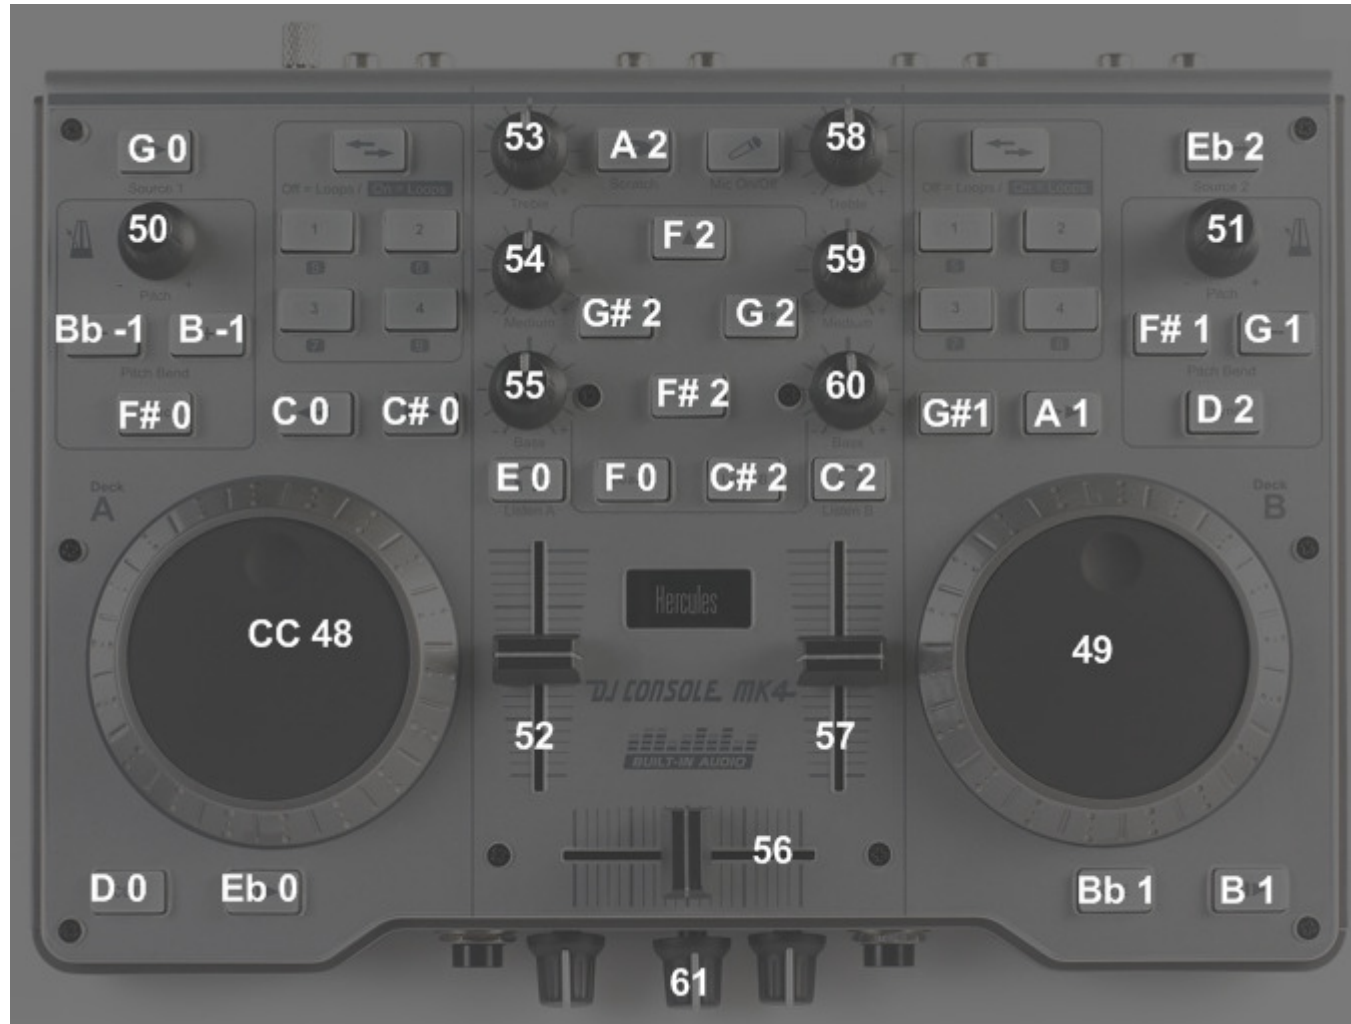

Deck A

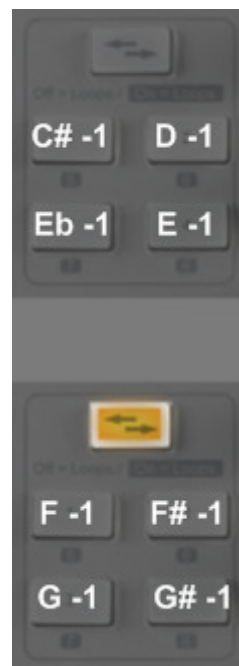

Deck B

