


Configuring Traktor Pro 2 for the DJConsole Rmx2 (Windows version)


1- Configuration of the ASIO driver/ MIDI channel

Open the **DJ Console control panel** , and from the **ADVANCED** tab, make sure the following parameters are set correctly:

a) **MIDI channel** is set to **1 (Defaults)**.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly. Consult Traktor's user manual for more details.

b) **Headphone channels** is set to **3-4 (default)**

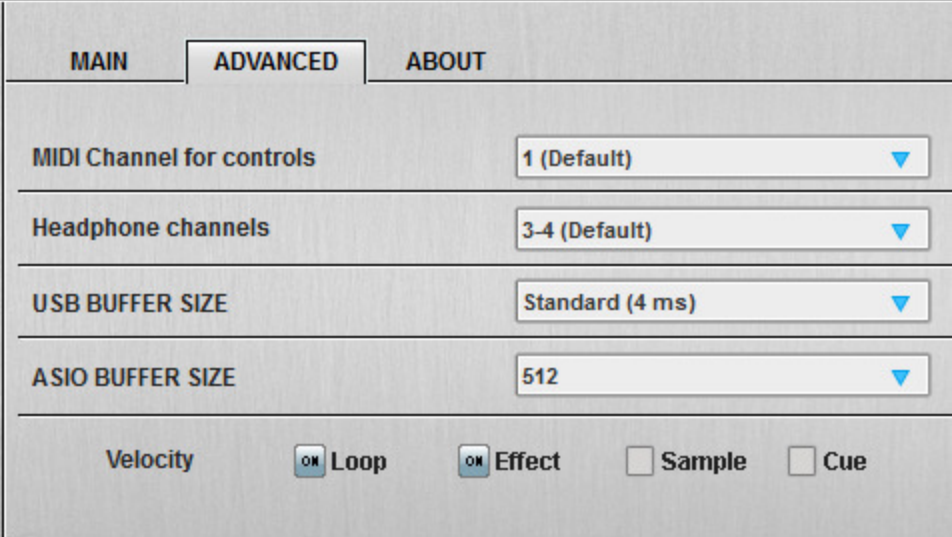

The screenshot shows the 'ADVANCED' tab of the DJ Console control panel. It features four dropdown menus: 'MIDI Channel for controls' set to '1 (Default)', 'Headphone channels' set to '3-4 (Default)', 'USB BUFFER SIZE' set to 'Standard (4 ms)', and 'ASIO BUFFER SIZE' set to '512'. At the bottom, there are five checkboxes: 'Velocity' (unchecked), 'Loop' (checked), 'Effect' (checked), 'Sample' (unchecked), and 'Cue' (unchecked).

c) Select the **USB buffer size** and **ASIO buffer size** you wish to use.

As no computer system is the same, you will need to experiment in order to find the correct values for your specific configuration.

NOTE: This setting cannot be modified while Traktor is running.

d) Disable the pad **Velocity** for both **Sample** and **Cue**.




2- Audio configuration in Traktor Pro 2

a) From the main menu, select **File > PREFERENCES**, and select **AUDIO SETUP**.


Choose **DJConsole Rmx2 ASIO** as **Audio Device**.

Notice that LATENCY should reflect the configuration previously made in the Control panel.

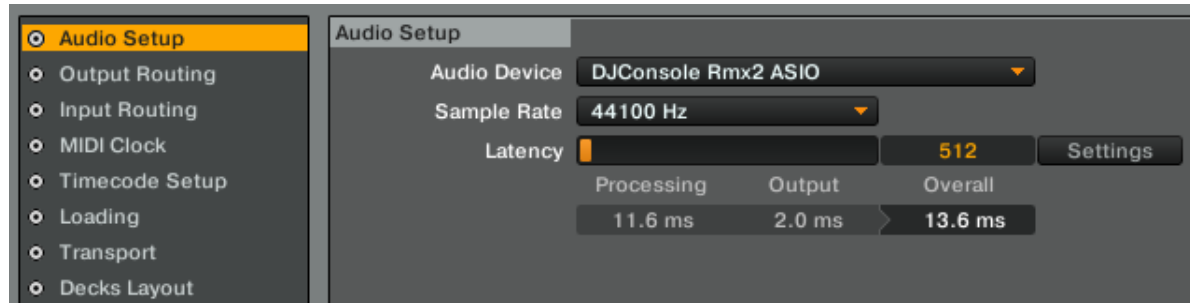

b) Under **Output Routing**,

- Under **Mixing Mode**, select **Internal**.
- Set **Out 3 & 4** for **Monitor** and **Out 1 & 2** for **Master**.

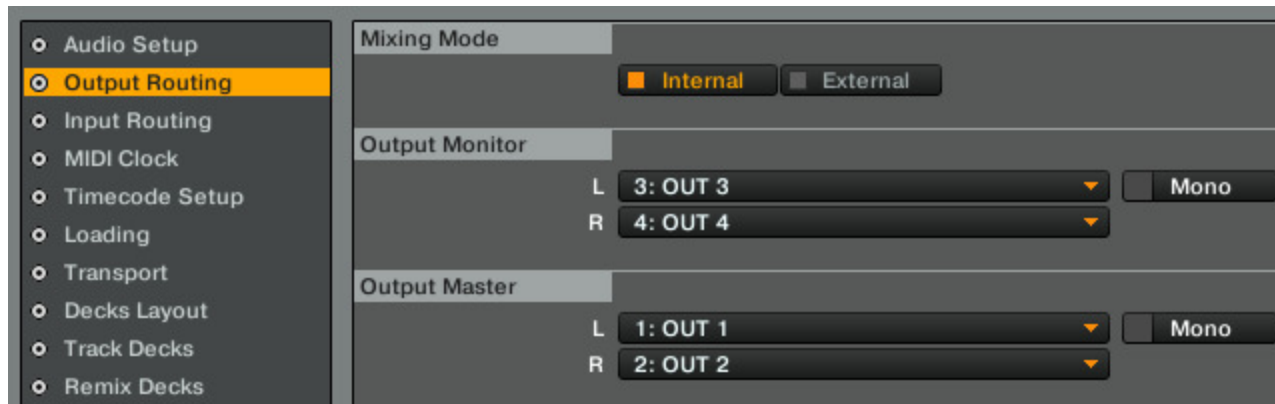

3- Configuration of the Midi controllers in Traktor Pro 2 (Version 2.50)

a) At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b) A menu will then display the different categories that will be imported.



c) In **Controller-Manager**:

- For **Device**, select – **DJConsole Rmx2 - Generic MIDI**
- Select **DJConsole Rmx2** for both **In-Port** and **Out-Port**.




This menu also give you access to the various MIDI settings, should you wish to modify them (Consult chapter **13.21 – Controller Manager** of the user manual for more details).



MIDI Layout for the DJConsole Rmx2 and Traktor Pro 2

NOTE: The terms used are those employed in Traktor.

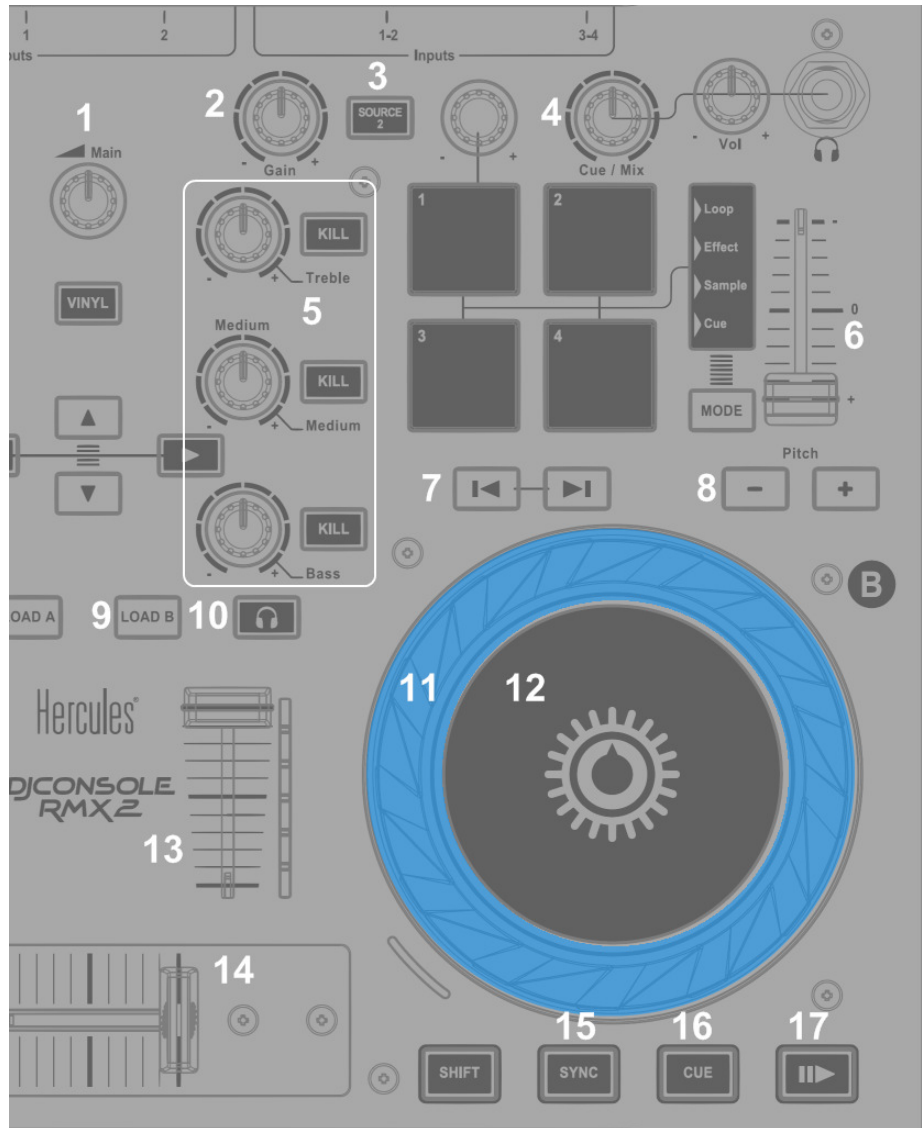

Main Configuration:

- 1-** Master Volume Adjust
- 2-** Filter Adjust
- 3-** Filter On
- 4-** Monitor Mix Adjust
- 5-** EQ (High/Mid/Bass Adjust + Kill)
- 6-** Tempo Adjust
- 7-** Seek position (Backward/Forward): 8 Beats
- 8-** Tempo Bend (Down/Up)
- 9-** Load Selected
- 10-** Monitor Cue On
- 11-** Tempo Bend (stepless)
- 12-** Jog Touch/Jog Turn/Scratch
- 13-** Volume Adjust
- 14-** Position
- 15-** Sync On
- 16-** Cue
- 17-** Play/Pause (Deck Common)








SHIFT +  : Gain Adjust (Mixer)

SHIFT +  : Seek position: 1 Beat









Navigation/ browser:

Folder Navigation

-  : Open Browser toggle
-  +  : Step Browsing
-  +  : Expand/Collapse
-  +  : Fast Browsing

Playlist navigation (Default)

-  : Open Browser toggle
-  : Step browsing
-  +  : Fast Browsing

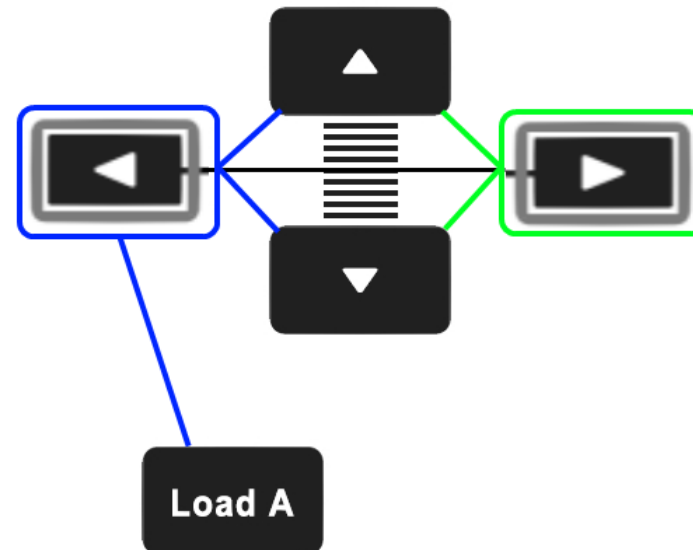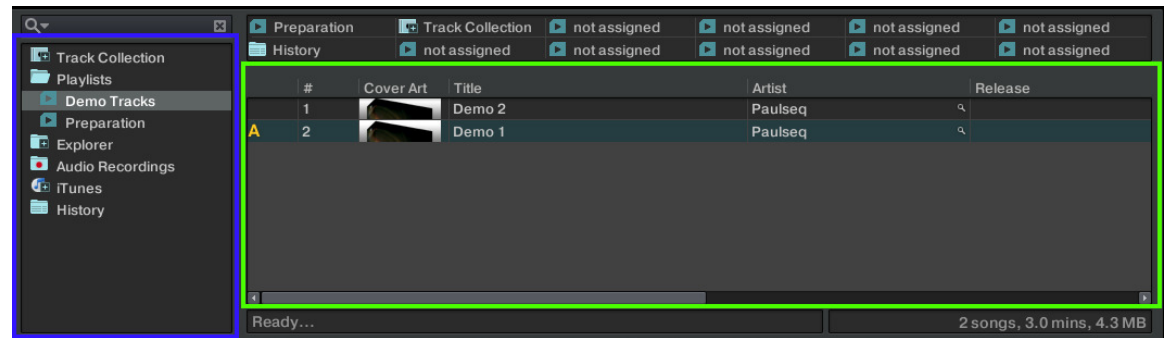

VU meters




Deck Post Fader Level(L+R)



Deck Pre-Fader Level (L+R)

Loop

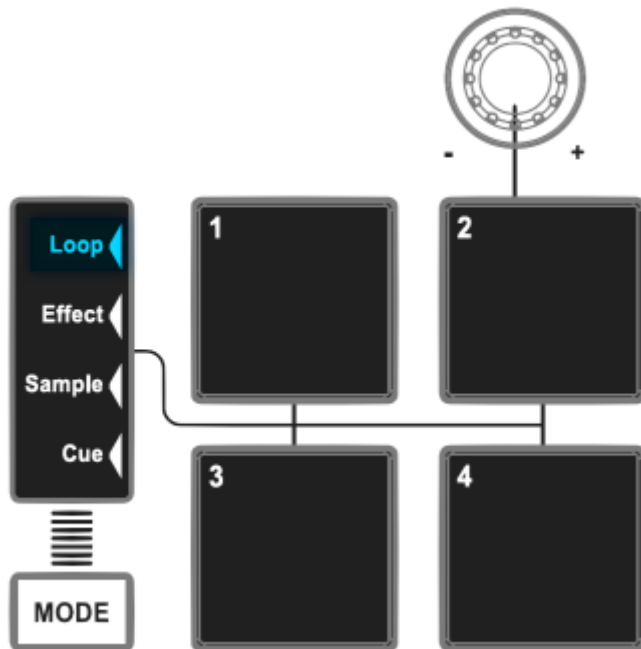

- Loop Size Selector

- **1**: Loop Set (In/Out)

- **2**: Loop Size Select + Set (2 Beats)

- **3**: Loop Size Select + Set (4 Beats)


- **4**: Loop Size Select + Set (8 Beats)



+ **1/2/3/4**: Slot Capture from Deck
(See [Samples](#))





Effect

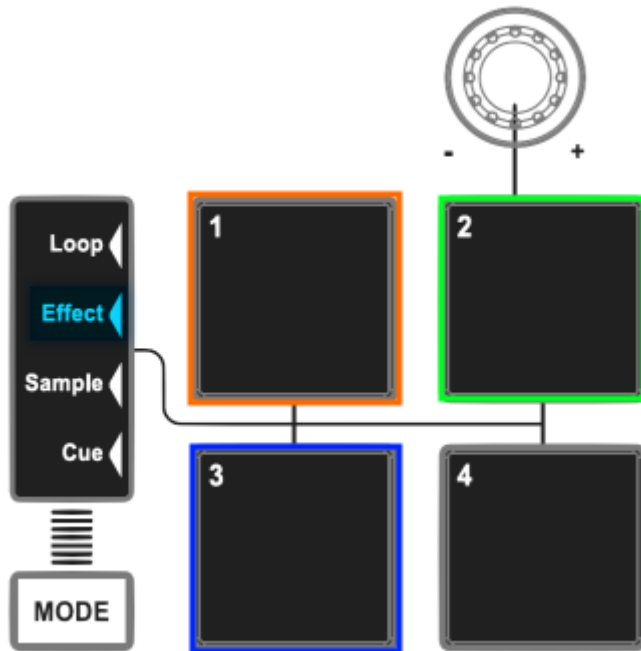

- Dry/Wet Group
- **1**: Effect 1 On/Off
- **2**: Effect 2 On/Off
- **3**: Effect 3 On/Off
- **4**: FX Unit 1On/Off (Deck A) / FX Unit 1On/Off (Deck B)
- **SHIFT** + **1/2/3**: Effect 1/2/3 amount



Sample

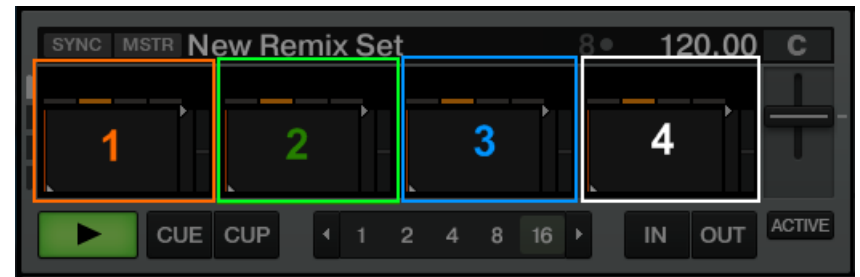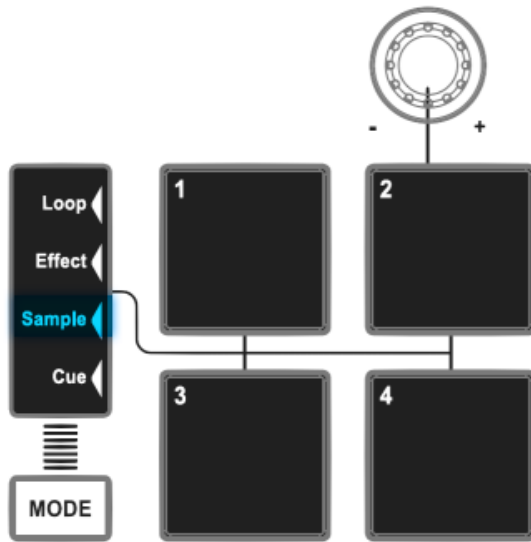

- **1:** Slot 1 Capture/Trigger/Mute
- **2:** Slot 2 Capture/Trigger/Mute
- **3:** Slot 3 Capture/Trigger/Mute
- **4:** Slot 4 Capture/Trigger/Mute



+ **1/2/3/4:** Slot Stop/Delete/Load from List


Cue

- Jump to Next/Previous HotCue/Loop

- **1:** Select / Set+Store Hotcue 1
- **2:** Select / Set+Store Hotcue 2
- **3:** Select / Set+Store Hotcue 3
- **4:** Select / Set+Store Hotcue 4



- + **1/2/3/4:** Delete Hotcue

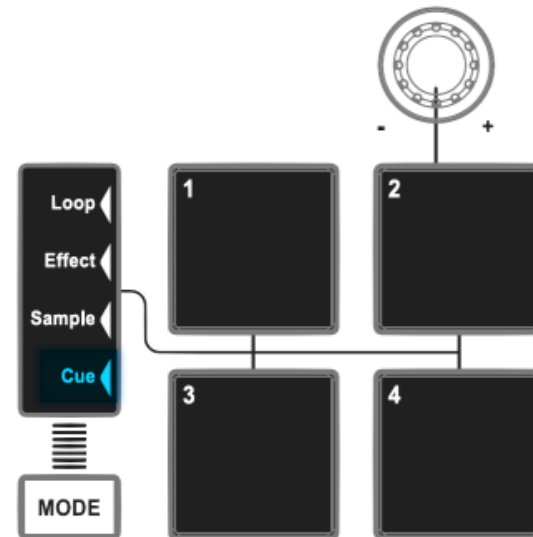

Midi Controllers/Notes map

