


# Configuring Traktor 2 Pro/Duo for the DJ Console Rmx (Windows version)

## **1- Configuration of the ASIO driver/ MIDI channel**

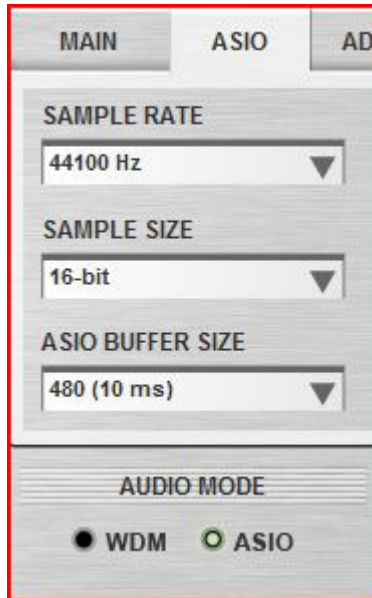

a) From the DJ Console control panel, set the audio mode to **ASIO**

b) Click the **ASIO** tab and configure the various driver settings to be used by Traktor.

**NOTE:** These settings cannot be modified once Traktor has been launched.

c) Next, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1**.


This is very important as the profile provided is configured for the DJ Console Rmx to work on this channel.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly. Consult Traktor's user manual for more details.




## 2- Audio configuration in Traktor


a) From the **FILE** menu, select **Audio Setup**. Choose **Hercules DJ Console Rmx ASIO** as **Audio Device**. Notice that the SAMPLE RATE and AUDIO LATENCY should reflect the configuration previously made in the Control panel

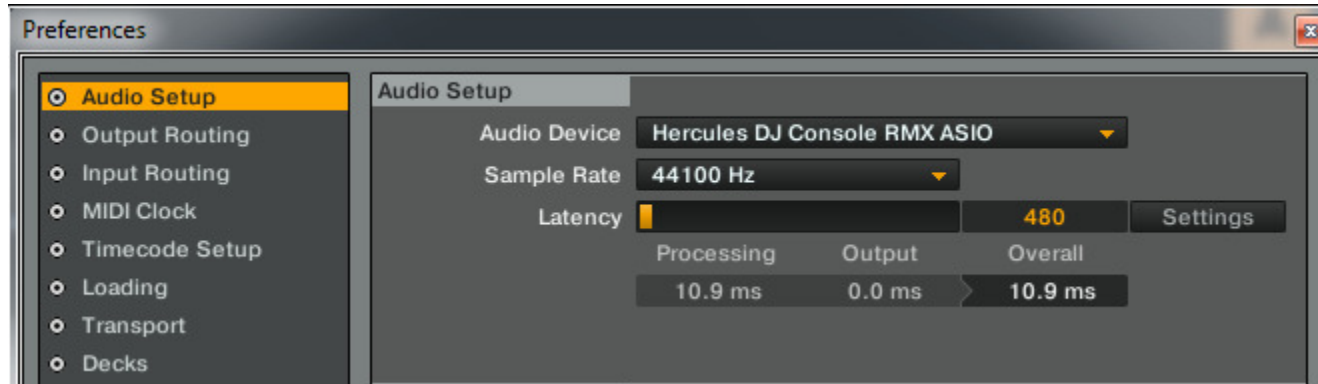

b) Under **Output Routing**, set Output 3 & 4 for **Monitor** and Output 1 & 2 for **Master**

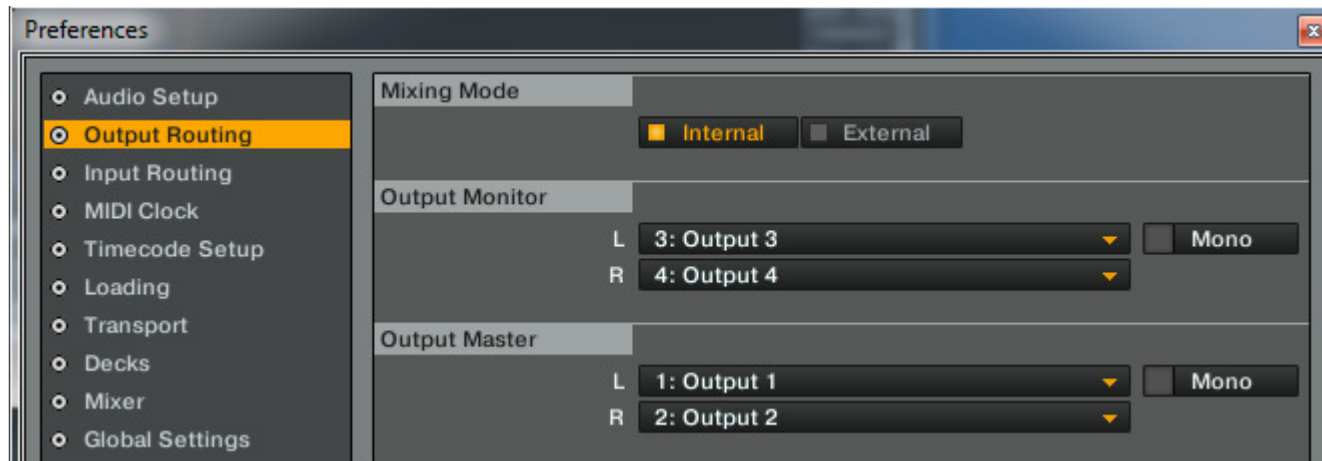

c) If you are using external sources, for **Input Routing**, select the DJ Console inputs for Input A&B.

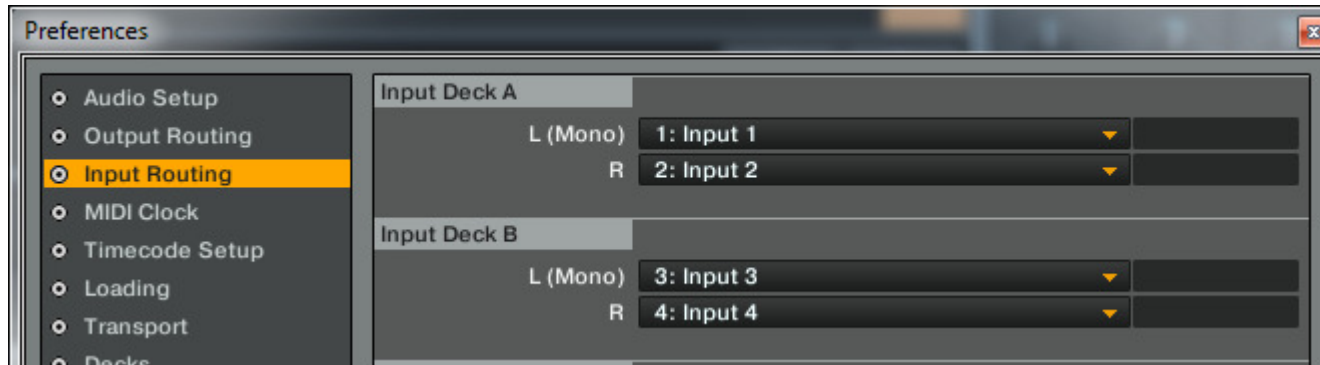

Don't forget to select the appropriate source Input type in the **DJ Console control panel**.

Using the **Source** buttons on **Deck A&B** will allow Traktor to switch between Internal and External playback




### 3- Configuration of the Midi controllers in Traktor 2 Pro/Duo (Version 2.12)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b. A menu will then display the different categories that will be imported

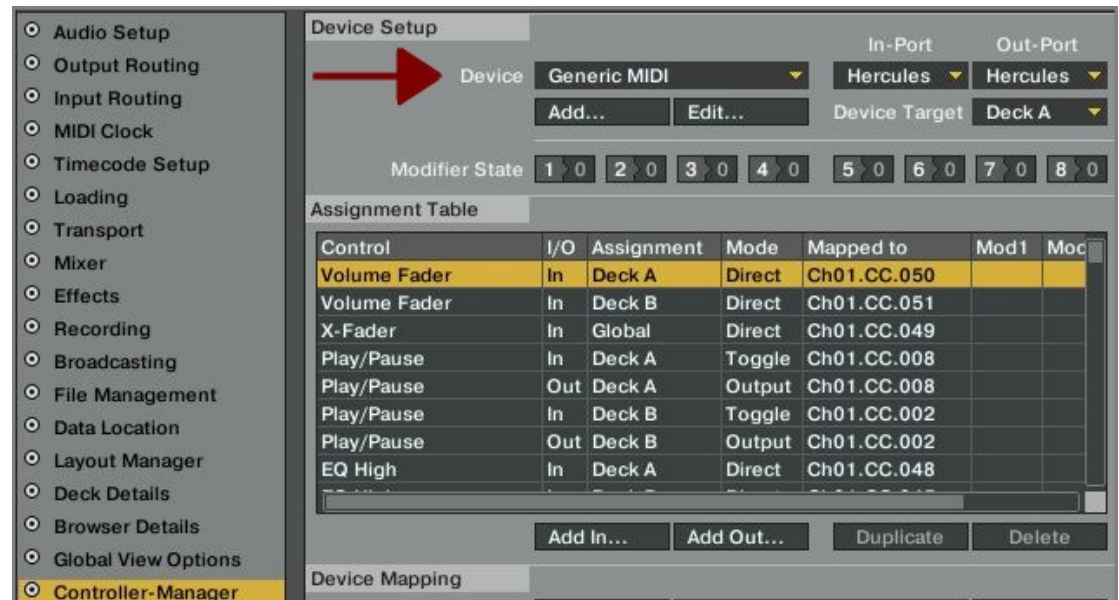

c. In **Controller-Manager**:

-For Device, select **DJ Console Rmx - Generic MIDI**

- Do the same for both **In-Port** and **Out-Port**.

This menu also give you access to the various MIDI settings, should you wish to modify them.




## **MIDI Layout for the DJ Console Rmx and Traktor 2 Pro/Duo**


**NOTE:** The terms used are those employed in Traktor

Main Configuration: **BALANCE knob set to RIGHT**

- A-** Deck Input Select
- B-** Deck Gain
- C-** EQ (Bass/ Mid/ Treble) and EQ Kill
- D-** Scratch On/Off
- E-** Tempo bend -
- F-** Tempo bend +
- G-** Loop:
  - 1: Loop Size -Previous
  - 2: Loop Set
  - 3: Loop Size -Next
- H-** Cues
  - 4: Previous Cue/Loop
  - 5: Cue Set /Store
  - 6: Next Cue/Loop
- I-** Tempo
- J-** Seek position
- K-** Monitor Cue
- L-** Load Selected
- M-** Sync
- N-** Jog Turn
- O-** Volume fader
- P-** Master Volume
- Q-** Cue
- R-** Seek position: (**Stop – return to start**)
- S-** Play/Pause
- T-** X-Fader

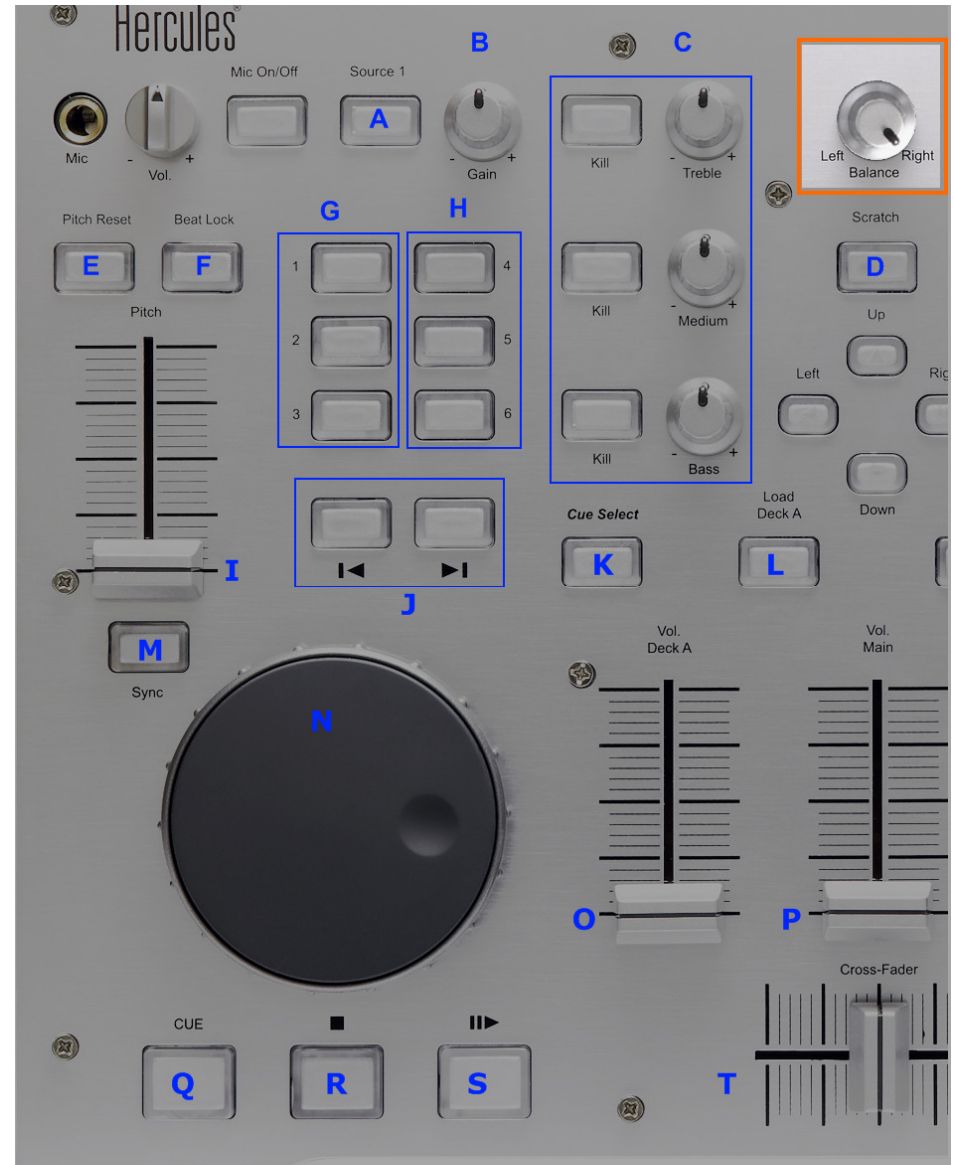

FX (Group): BALANCE knob set to LEFT/ Beat Lock LED On

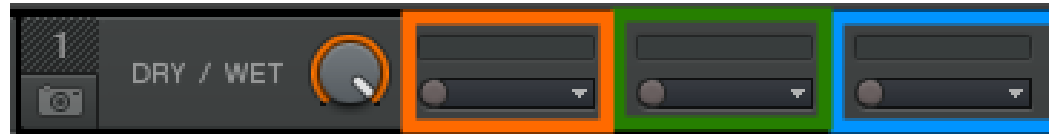

**1-** Effect 1 On select

**4-** Effect 1

**Treble:** Effect 1 amount

**2-** Effect 2 On Select

**5-** Effect 2

**Mid:** Effect 2 amount


**3-** Effect 2 On Select

**6-** Effect 2

**Bass:** Effect 2 amount

**A-** Effect Unit 1

**B-** Effect Unit 2

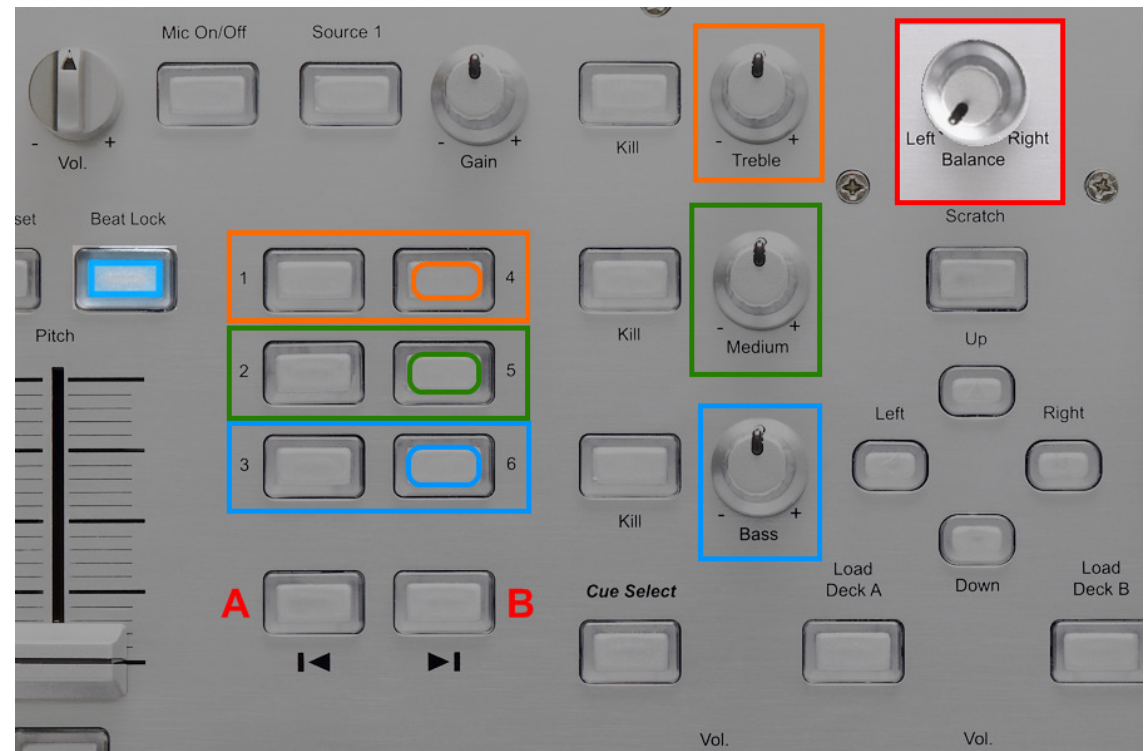


## Scratch:



**STOP + Jog Wheel : Jog Turn (Scratch)**



## Navigation/ browser:

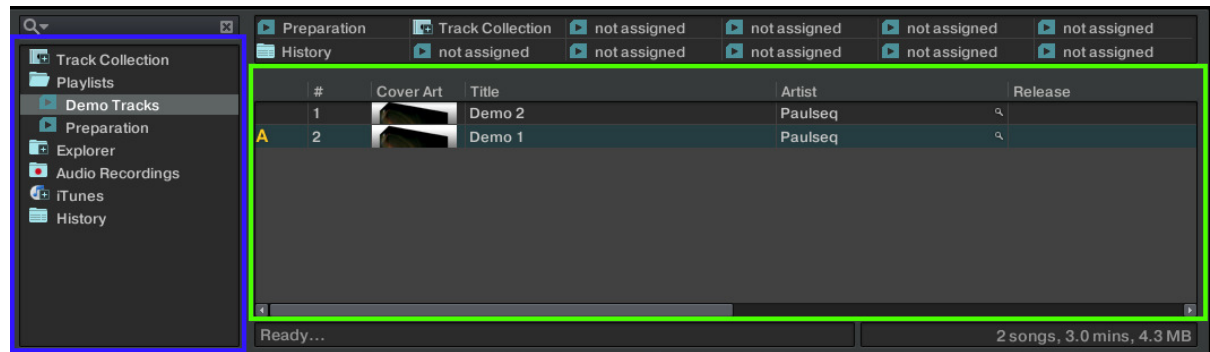

## Folder navigation

- **Left:** Open Browser toggle
- **Left + Up/Down:** Step browsing
- **Left + Right:** Expand/Collapse




- **Folder +** : Fast browsing

## Playlist navigation (Default)

- **Up/Down** : Step browsing
- **Right:** Open Browser toggle



- **Right +** : Fast browsing

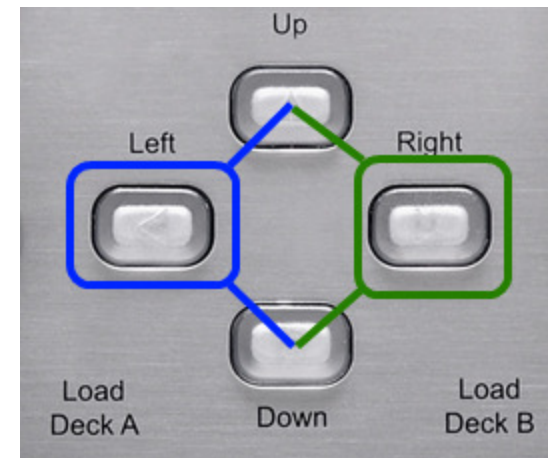

## Midi controllers map

